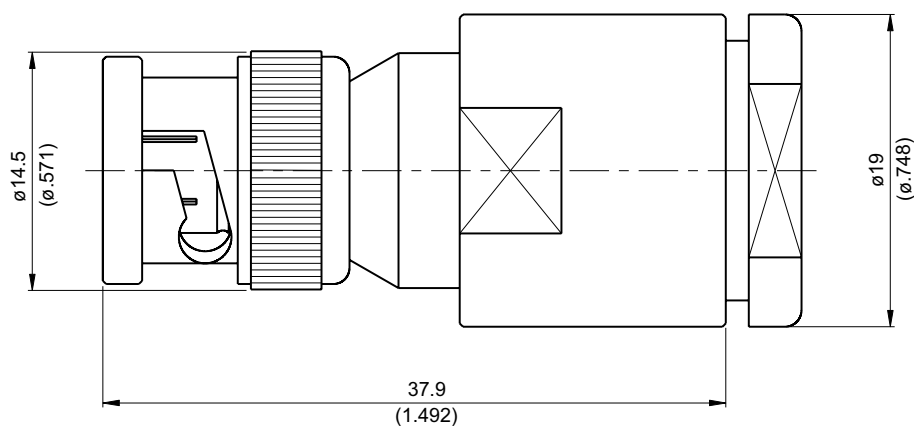


BNC3200-0011

BNC Plug Clamp

75Ω



Parts	Material	Plating (Micro-inch)
Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Top Hat	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Pin	Brass	Gold 3 Over Nickel 50 Over Copper 50
Gasket	Silicone	
Spring	SK5	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Insulator	Teflon	
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight: 37.24 g




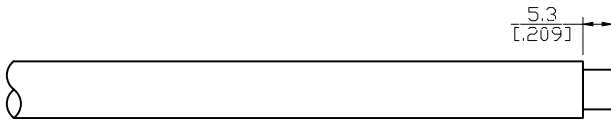
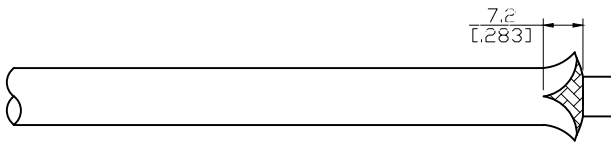
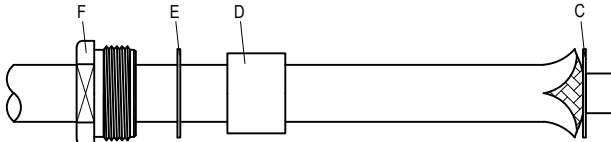
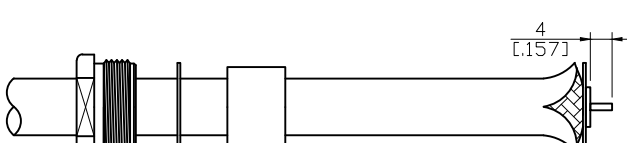
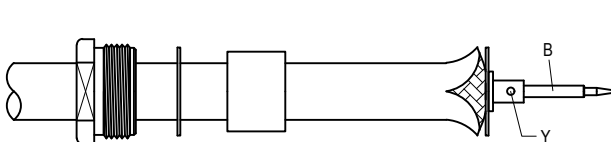
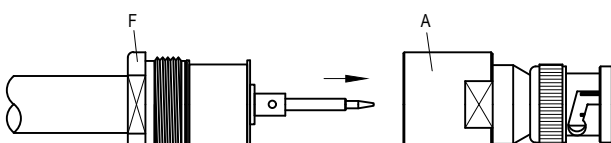
Suitable Cables: RG11,RG216

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

BNC3200-0011		DATE	2017/03/27	REV	—
A	B	C	D	E	F
					
BODY	CONTACT PIN	TOP HAT	GASKET	WASHER	NUT
DIAGRAM		ASSEMBLY INSTRUCTION			
		Step 1: STRIP AS SHOWN.			
		Step 2: MAKE A 7.2MM LONG CUT IN THE JACKET WITHOUT DAMAGING THE BRAIDING.			
		Step 3: SLIDE NUT " F " 、 WASHER " E " AND GASKET " D " OVER CABLE. Step 4: LOOSEN BRAIDING AND SLIDE TOP HAT " C " BETWEEN DIELECTRIC AND BRAIDING.			
		Step 5: STRIP AS SHOWN.			
		Step 6: PUT CONTACT PIN " B " ON CENTER CONDUCTOR AND SOLDER OR CRIMP IN " Y ". (USE 3.3mm/0.130inch HEX SECTION OF INSERT-C IF CRIMPED)			
		Step 7: FINALLY SCREW NUT " F " ON THE CONNECTOR BODY " A ".			
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				Albert	