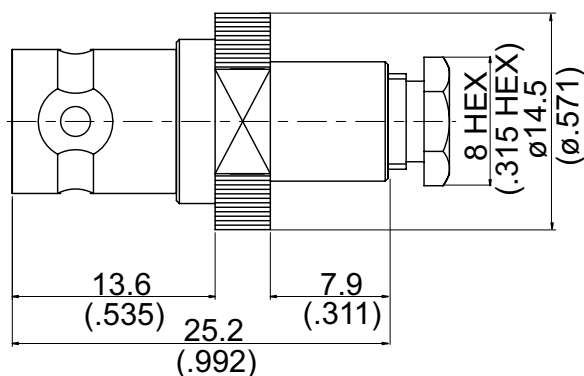


BNC8200-0316

BNC Jack Clamp

50Ω



Parts	Material	Plating (Micro-inch)
Nut Hex	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicone	
Braid Clamp	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Pin	Phosphor Bronze	Gold 3 Over Nickel 50 Over Copper 50
Insulator	Teflon	
Contact Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight:

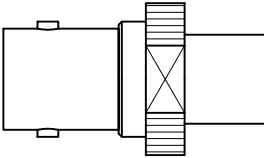



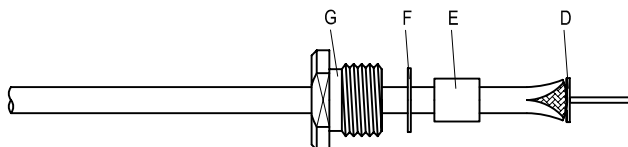
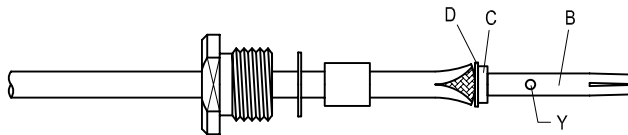
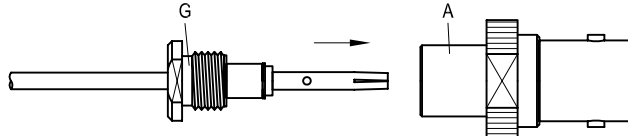
Suitable Cables:RG174, RG188, RG316, RG316-E, RG316-FEP, RD316, RG316D-E, RD316-FEP

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

BNC8200-0316			DATE	2016/04/18	REV	—
A	B	C	D	E	F	G
						
BODY	CONTACT PIN	INSULATOR	TOP HAT	GASKET	WASHER	NUT
DIAGRAM			ASSEMBLY INSTRUCTION			
			Step 1: STRIP AS SHOWN.			
			Step 2: MAKE A 3.3MM LONG CUT IN THE JACKET WITHOUT DAMAGING THE BRAIDING.			
			Step 3: SLIDE NUT "G" 、 WASHER "F" AND GASKET "E" OVER CABLE. Step 4: LOOSEN BRAIDING AND SLIDE TOP HAT "D" IN PLACE.			
			Step 5: SLIDE PREPARED CABLE INTO INSULATOR "C". Step 6: PUT CONTACT PIN "B" ON CENTER CONDUCTOR AND SOLDER OR CRIMP IN "Y". (USE SQUARE 1.6mm/0.063inch SECTION OF INSERT-A IF CRIMPED)			
			Step 7: FINALLY SCREW "G" ON THE CONNECTOR BODY "A".			
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.						
APPROVED		CHECKED		DRAWING		
				Albert		