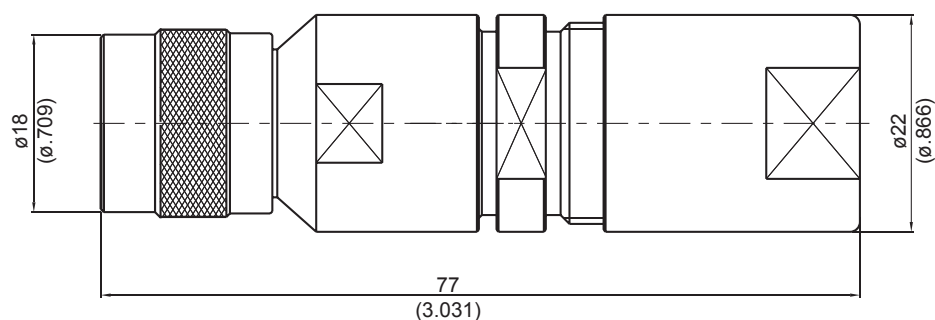


C3200B-0217

C Plug Clamp

50Ω



Parts	Material	Plating(Micro-inch)
Crimp Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicone	
Braid Clamp	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Center Pin	Brass	Gold 5 Over Nickel 50 Over Copper 50
Spring	SK5	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Insulator	Teflon	
Contact Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight: 132.9 g





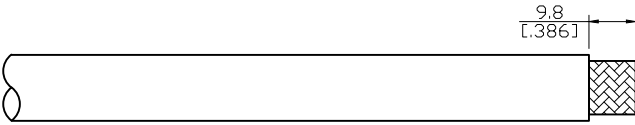
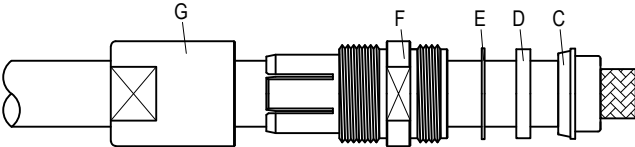
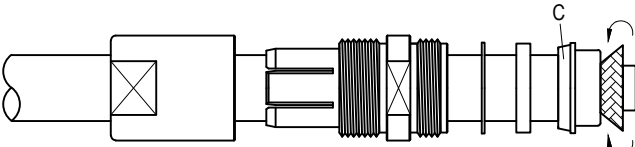
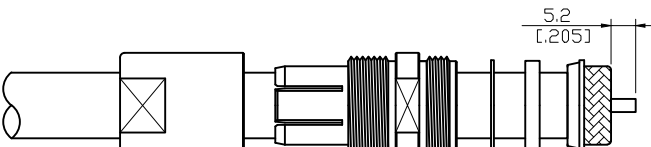
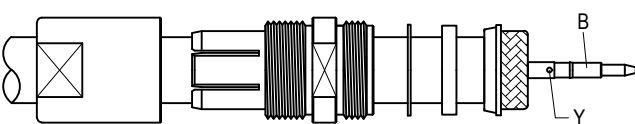
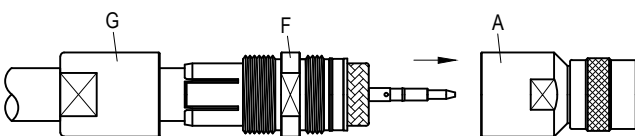
Suitable Cables: RG217

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

C3200B-0217			DATE	2019/07/30	REV	A
A	B	C	D	E	F	G
						
BODY	CONTACT PIN	BRAID CLAMP	GASKET	WASHER	CONTACT BODY	NUT
DIAGRAM			ASSEMBLY INSTRUCTION			
			Step 1: STRIP AS SHOWN.			
			Step 2: SLIDE NUT " G " 、 CONTACT BODY " F " 、 WASHER " E " 、 GASKET " D " AND BRAID CLAMP " C " OVER CABLE.			
			Step 3: WRAP THE BRAIDING OVER " F " .			
			Step 4: STRIP AS SHOWN.			
			Step 5: PUT CONTACT PIN " B " ON CENTER CONDUCTOR AND SOLDER IN " Y " .			
			Step 6: SCREW CONTACT BODY " F " ON THE CONNECTOR BODY " A " . Step 7: SCREW NUT " G " ON THE CONTACT BODY " F " .			
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.						
APPROVED		CHECKED		DRAWING		
				Albert		