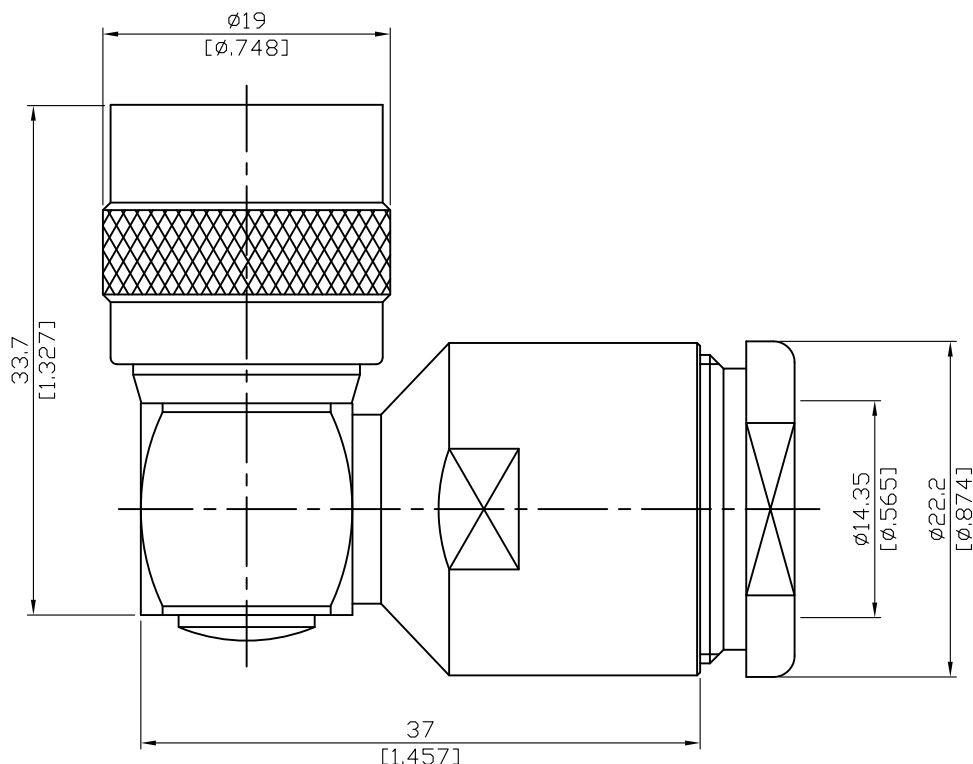


C3200B1-9217

C plug clamp right angle for RG217

50Ω



Parts	Material	Plating (Micro-inch)
Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Cover	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Insulator	Teflon	
Gasket	Silicone	
Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Spring	SK5	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Pin	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

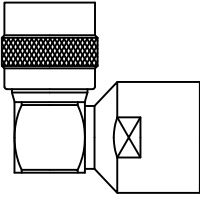
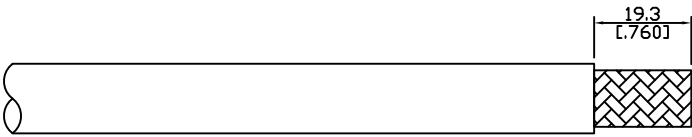
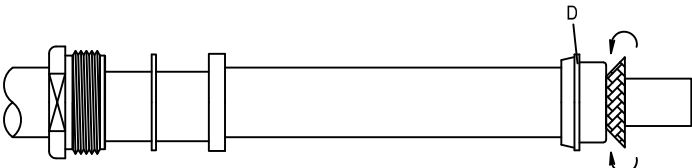
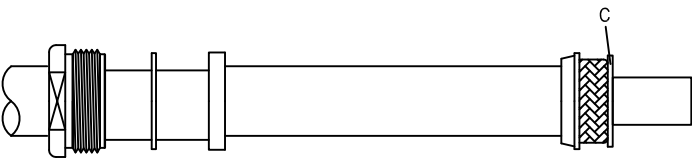
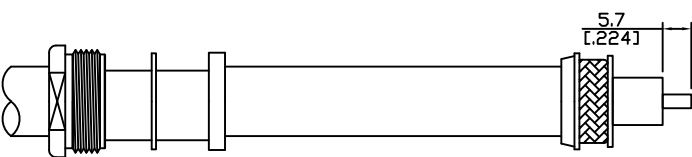
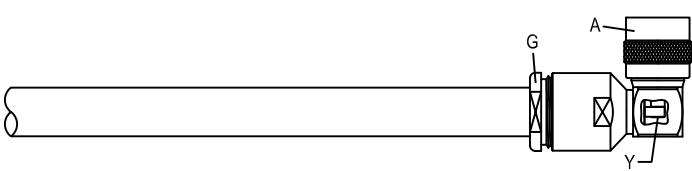
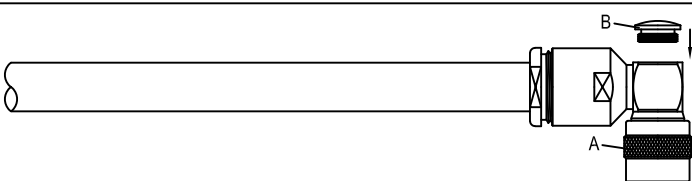
Suitable Cables: RG217

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

C3200B1-9217			DATE	2022/11/15	REV	—
A	B	C	D	E	F	G
						
BODY	NUT	WASHER	BRAID CLAMP	GASKET	WASHER	NUT
DIAGRAM			ASSEMBLY INSTRUCTION			
			Step 1: STRIP AS SHOWN.			
			Step 2: SLIDE NUT " G "、WASHER " F " AND GASKET " E " OVER CABLE. Step 3: MAKE A 3.0MM (x4) LONG CUT IN THE JACKET WITHOUT DAMAGING THE BRAIDING.			
			Step 4: SLIDE BRAID CLAMP " D " OVER CABLE. Step 5: WRAP THE BRAIDING OVER " D ".			
			Step 6: SLIDE PREPARED CABLE INTO WASHER " C ".			
			Step 7: STRIP AS SHOWN.			
			Step 8: SCREW NUT " G " ON THE CONNECTOR CONTACT BODY " A " AND SOLDER IN " Y ".			
			Step 9: FINALLY SCREW NUT " B " ON THE CONNECTOR BODY " A ".			
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.						
APPROVED		CHECKED		DRAWING		
				Albert		