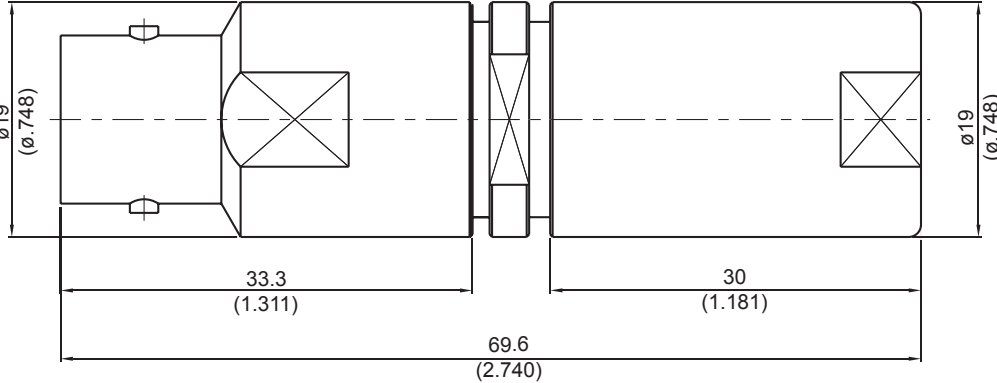


C8200B-0010

C Jack Clamp

52Ω



Parts	Material	Plating(Micro-inch)
Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicone	
Braid Clamp	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Pin	Phosphor Bronze	Gold 5 Over Nickel 50 Over Copper 50
Insulator	Teflon	
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight: 96.06 g



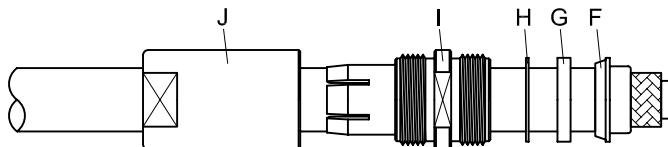
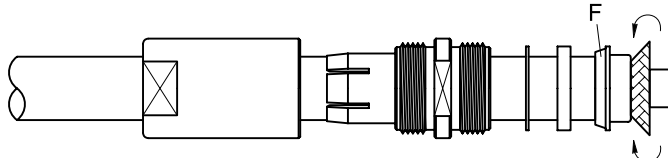
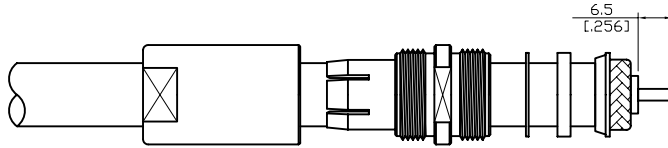
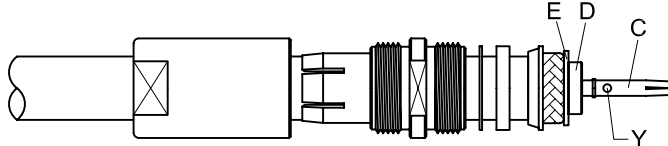
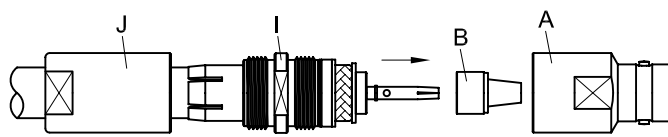
Suitable Cables: RG10

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

C8200B-0010			DATE	2016/04/18	REV	—
A		B	C	D		
						
BODY		INSULATOR	CONTACT PIN	INSULATOR		
E	F	G	H	I	J	
						
WASHER	BRAID CLAMP	GASKET	WASHER	NUT	NUT	
DIAGRAM			ASSEMBLY INSTRUCTION			
			Step 1: STRIP AS SHOWN.			
			Step 2: SLIDE NUT "J" 、 NUT "I" 、 WASHER "H" 、 GASKET "G" AND BRAID CLAMP "F" OVER CABLE.			
			Step 3: WRAP THE BRAIDING OVER "F".			
			Step 4: STRIP AS SHOWN.			
			Step 5: SLIDE PREPARED CABLE INTO WASHER "E" AND TEFLON "D". Step 6: PUT CONTACT PIN "C" ON CENTER CONDUCTOR AND SOLDER IN "Y".			
			Step 7: SLIDE TEFLON "B" INTO CONNECTOR BODY "A". Step 8: SCREW "I" ON THE CONNECTOR BODY "A". Step 9: SCREW "J" ON THE NUT "I".			
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.						
APPROVED		CHECKED		DRAWING		
				Albert		