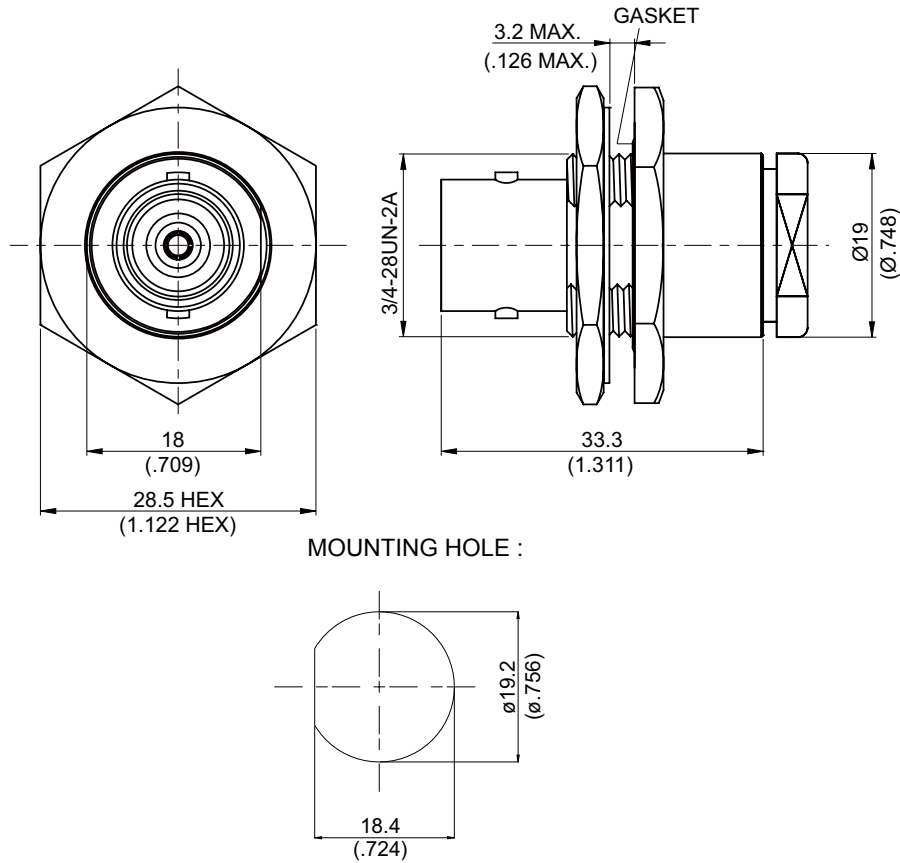


C8205B-0005

C Jack Clamp For Bulkhead 50Ω



Parts	Material	Plating(Micro-inch)
Hex Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Lock Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicone	
Braid Clamp	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Pin	Phosphor Bronze	Gold 5 Over Nickel 50 Over Copper 50
Insulator	Teflon	
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight:
Suitable Cables: RG5

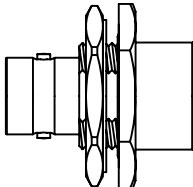


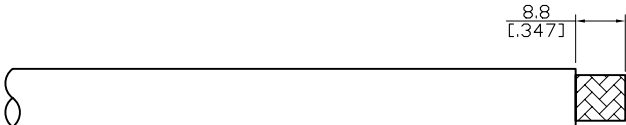
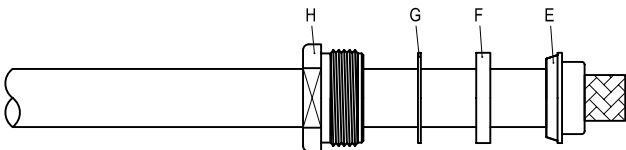
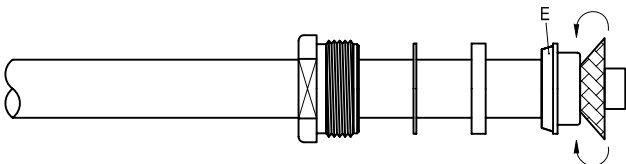
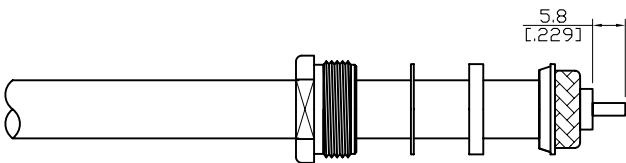
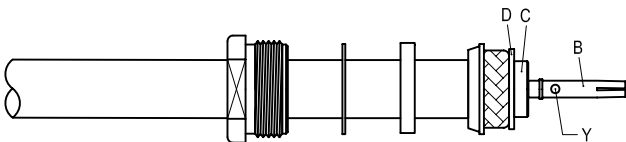
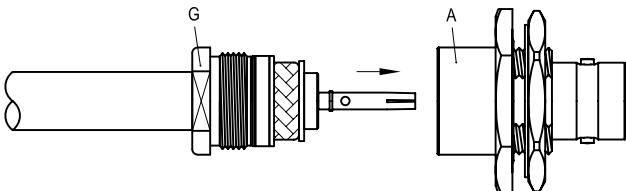
IP67(Mated)

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

C8205B-0005			DATE	2016/04/18		REV	—	
A	B	C	D	E	F	G	H	
								
BODY + LOCK WASHER + GASKET +HEX NUT		CONTACT PIN	INSULATOR	WASHER	BRAID CLAMP	GASKET	WASHER	NUT
DIAGRAM			ASSEMBLY INSTRUCTION					
			Step 1: STRIP AS SHOWN.					
			Step 2: SLIDE NUT " H " 、WASHER " G " 、GASKET " F " AND BRAID CLAMP " E " OVER CABLE.					
			Step 3: WRAP THE BRAIDING OVER " E " .					
			Step 4: STRIP AS SHOWN.					
			Step 5: SLIDE PREPARED CABLE INTO WASHER " D " AND INSULATOR " C " . Step 6: PUT CONTACT PIN " B " ON CENTER CONDUCTOR AND SOLDER OR CRIMP IN " Y " . (USE 2.55mm/0.100inch HEX SECTION OF INSERT-A IF CRIMPED)					
			Step 7: FINALLY SCREW NUT " G " ON THE CONNECTOR BODY " A " .					
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.								
APPROVED			CHECKED			DRAWING		
						Albert		