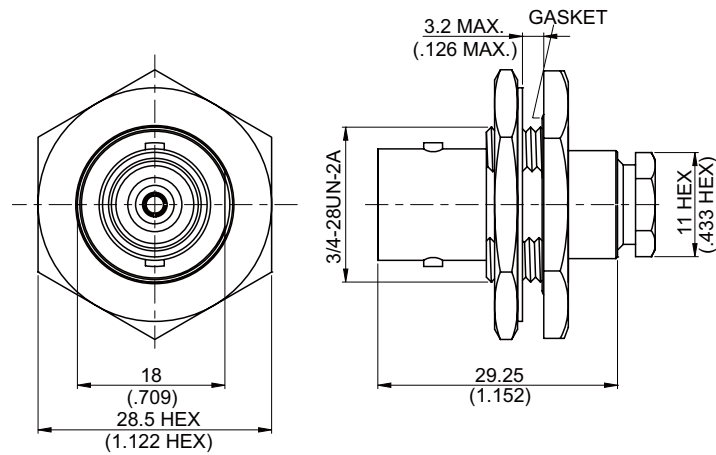
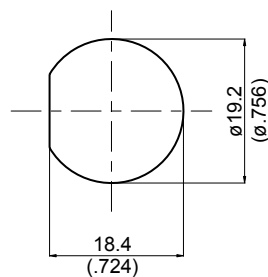


C8205B-0058

C Jack Clamp For Bulkhead 50Ω



MOUNTING HOLE :



Parts	Material	Plating(Micro-inch)
Lock Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Hex Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicone	
Braid Clamp	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Body	Teflon	
Contact Pin	Phosphor Bronze	Gold 5 Over Nickel 50 Over Copper 50
Insulator	Teflon	
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight:

Suitable Cables: RG58, JBY195, RG55, RG142, RG400, RG142-E

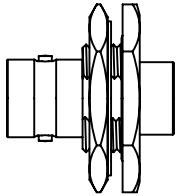

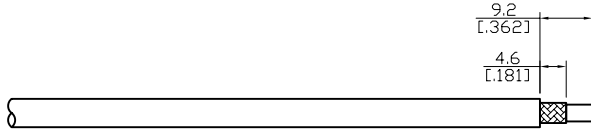

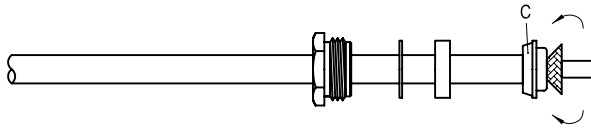
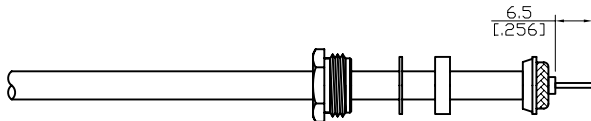

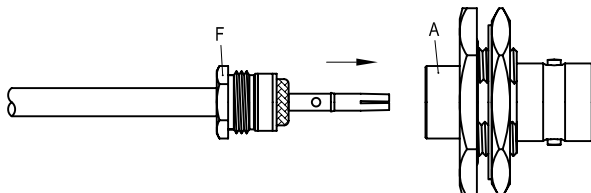
IP67(Mated)

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

C8205B-0058		DATE	2017/03/27		REV	—
A	B	C	D	E	F	
						
BODY + GASKET + WASHER + HEX NUT		CONTACT PIN	BRAID CLAMP	GASKET	WASHER	NUT
DIAGRAM			ASSEMBLY INSTRUCTION			
			Step 1: STRIP AS SHOWN.			
			Step 2: SLIDE NUT " F " 、 WASHER " E " 、 GASKET " D " 、 AND BRAID CLAMP " C " OVER CABLE.			
			Step 3: WRAP THE BRAIDING OVER " C " .			
			Step 4: STRIP AS SHOWN.			
			Step 5: PUT CONTACT PIN " B " ON CENTER CONDUCTOR AND SOLDER OR CRIMP IN " Y " . (USE SQUARE 2.4mm/0.094inch SECTION OF INSERT-A IF CRIMPED)			
			Step 6: FINALLY SCREW " F " ON THE CONNECTOR BODY " A " .			
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.						
APPROVED		CHECKED			DRAWING	
					Albert	