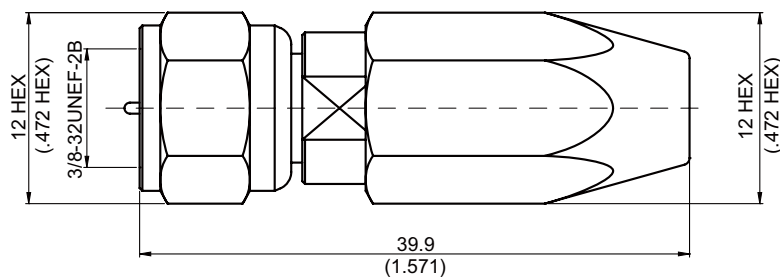


F3200-0059

F Plug Clamp

75Ω



NOTE: Waterproof connector (IP 68 compliant when mated)

Parts	Material	Plating (Micro-inch)
Gasket	Silicon	
Nut Hex	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Barrel	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Insulator	Teflon	
Contact Pin	Brass	Gold 3 over Nickel 50 over Copper 50
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50





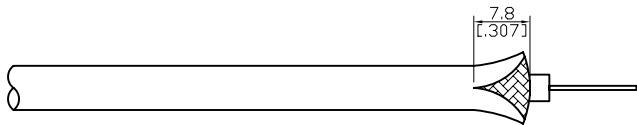
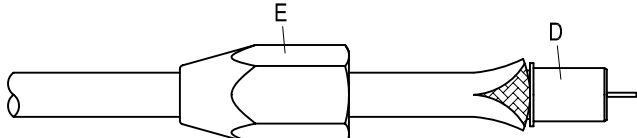
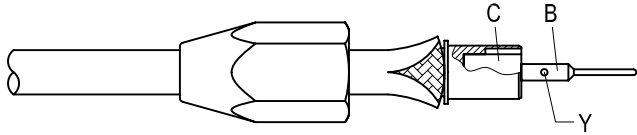
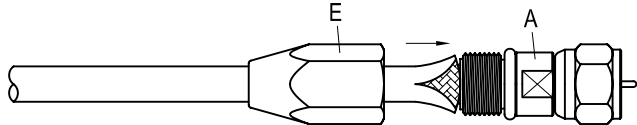
Weight:
Suitable Cables:RG59

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

F3200-0059		DATE	2014/04/29	REV	—
A	B	C	D	E	
					
BODY + GASKET	CONTACT PIN	INSULATOR	BARREL	NUT	
DIAGRAM			ASSEMBLY INSTRUCTION		
			Step 1: STRIP AS SHOWN.		
			Step 2: MAKE A 7.8MM LONG CUT IN THE JACKET WITHOUT DAMAGING THE BRAIDING.		
			Step 3: SLIDE NUT " E " OVER CABLE. Step 4: LOOSEN BRAIDING AND SLIDE BARREL " D " IN PLACE.		
			Step 5: SLIDE PREPARED CABLE INTO INSULATOR " C ". Step 6: PUT CONTACT PIN " B " ON CENTER CONDUCTOR AND SOLDER IN " Y ".		
			Step 7: INSERT PREPARED CABLE INTO CONNECTOR BODY " A ". Step 8: FINALLY SCREW NUT " E " ON THE CONNECTOR BODY " A ".		
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				Albert	