


FME3100-1.13

FME Plug Crimp

50Ω

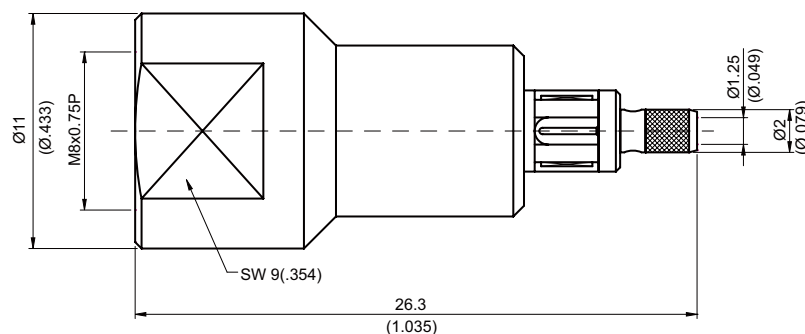

Parts	Material	Plating(Micro-inch)
Ferrule	Brass	Tin-Zinc-Copper-Alloy 100 over Copper 50
Cover	Brass	Tin-Zinc-Copper-Alloy 100 over Copper 50
Barrel	Brass	Tin-Zinc-Copper-Alloy 100 over Copper 50
Contact Pin	Brass	Gold 4 Over Nickel Phosphorus Alloy 80 Over Copper 20
Insulator	Teflon	
Body	Brass	Tin-Zinc-Copper-Alloy 100 over Copper 50

Weight:

Suitable Cables: 1.13 mm size cable


This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

FME3100-1.13

JYE BAO CO., LTD.

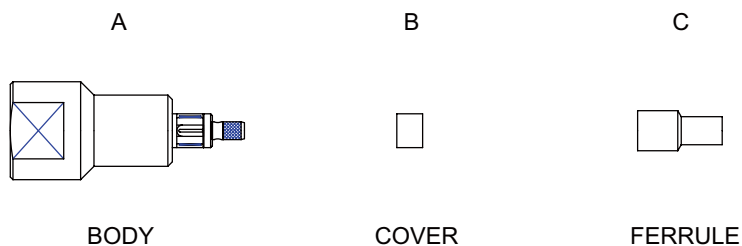


DIAGRAM


ASSEMBLY INSTRUCTION




Step 1: STRIP AS SHOWN .




Step 2: SLIDE FERRULE "C" OVER CABLE .

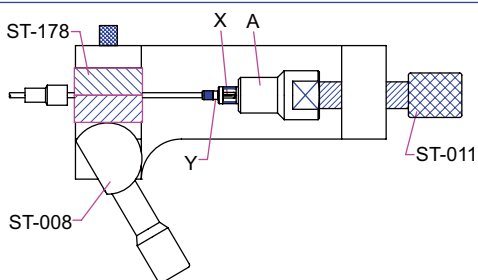

Step 3: INSERT PREPARED CABLE INTO CONNECTOR BODY "A" AND USE SOLDERING FIXTURE "ST-008", INSERT TOOL "ST-178" AND LOCATOR TOOL "ST-011" TO FIX THE CONNECTOR. SOLDER IN "X" AND "Y".

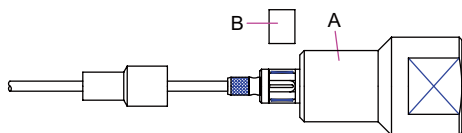

Step 4: PUT COVER "B" ON BODY "A" .

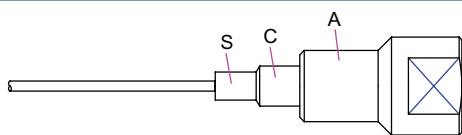

Step 5: SLIDE FERRULE "C" TOWARDS THE CONNECTOR "A" AND CRIMP IN "S" .

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.