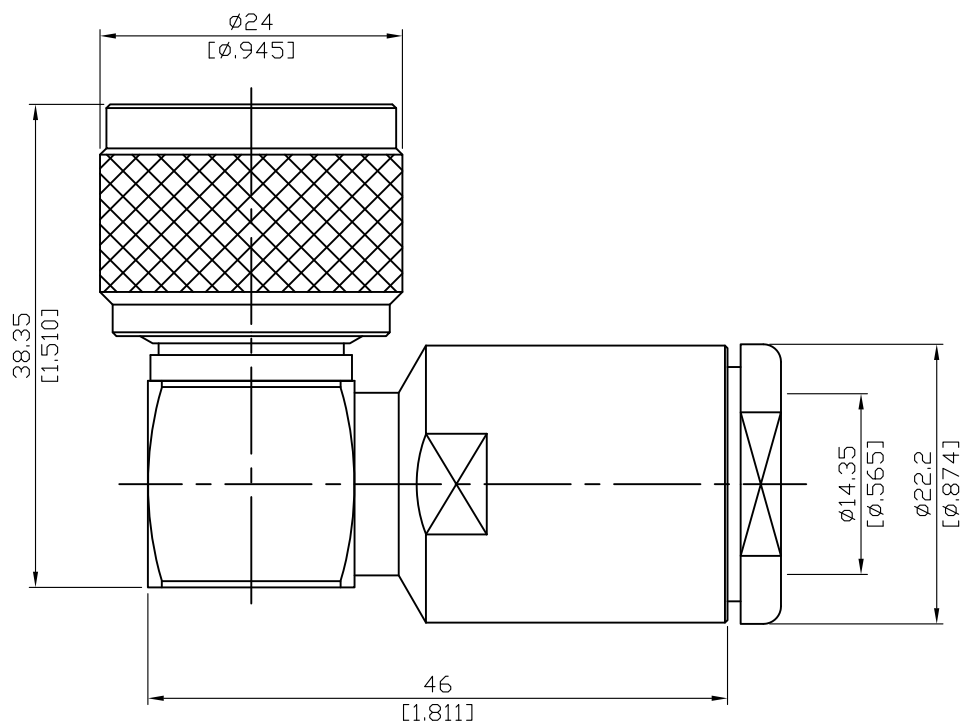


HN3200B1-9217

HN plug clamp right angle for RG217

50Ω



Parts	Material	Plating (Micro-inch)
Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Insulator	Teflon	
Contact Pin	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Gasket	Silicone	
Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Braid Clamp	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

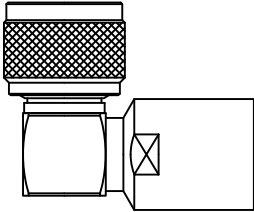

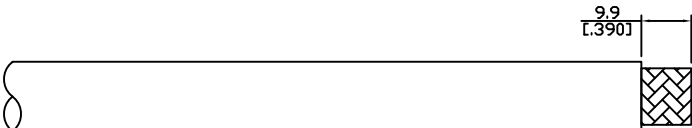
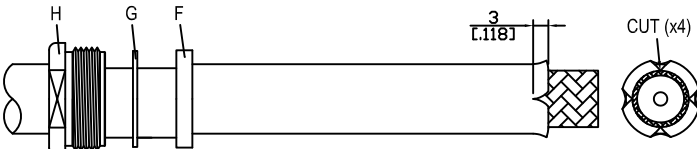
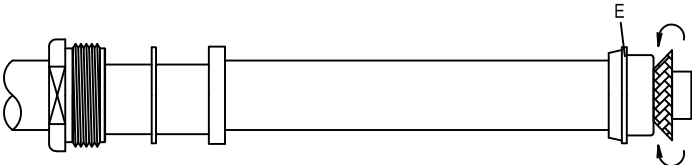
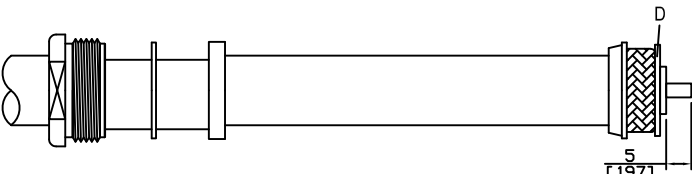
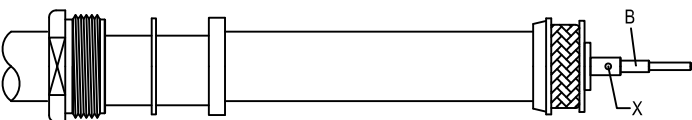
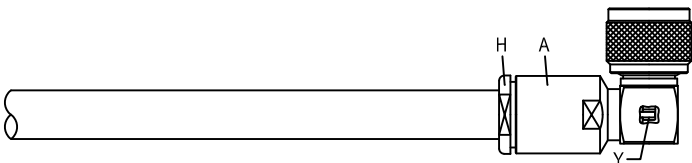
Suitable Cables: RG217

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

HN3200B1-9217				DATE	2022/11/15	REV	—
A	B	C	D	E	F	G	H
							
BODY	CONTACT PIN	NUT	WASHER	BRAID CLAMP	GASKET	WASHER	NUT
DIAGRAM				ASSEMBLY INSTRUCTION			
				Step 1: STRIP AS SHOWN.			
				Step 2: SLIDE NUT " H "、WASHER " G " AND GASKET " F " OVER CABLE. Step 3: MAKE A 3.0MM (x4) LONG CUT IN THE JACKET WITHOUT DAMAGING THE BRAIDING.			
				Step 4: SLIDE BRAID CLAMP " E " OVER CABLE. Step 5: WRAP THE BRAIDING OVER " E ".			
				Step 6: SLIDE PREPARED CABLE INTO WASHER " D ". Step 7: STRIP AS SHOWN.			
				Step 8: PUT PIN " B " ON CENTER CONDUCTOR AND SOLDER IN " Y ".			
				Step 9: SCREW NUT " H " ON THE CONNECTOR CONTACT BODY " A " AND SOLDER IN " Y ".			
				Step 10: FINALLY SCREW NUT " C " ON THE CONNECTOR BODY " A ".			
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.							
APPROVED		CHECKED			DRAWING		
					Albert		