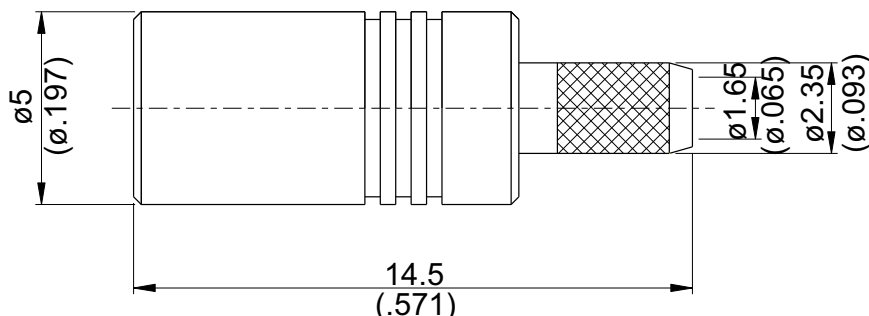




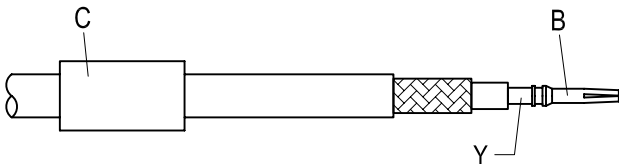
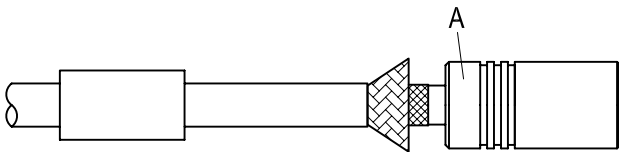
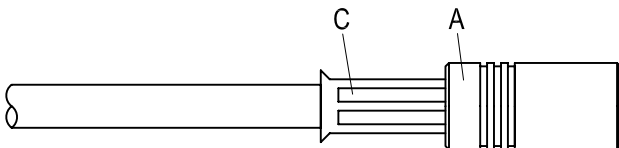
MCX8100-0179	MCX Jack Crimp	75Ω															
																	
<table><tr><th>Parts</th><th>Material</th><th>Plating (Micro-inch)</th></tr><tr><td>Ferrule</td><td>Brass</td><td>Gold 5 Over Nickel 50 Over Copper 50</td></tr><tr><td>Contact Pin</td><td>Phosphor Bronze</td><td>Gold 20 Over Nickel 50 Over Copper 50</td></tr><tr><td>Insulator</td><td>Teflon</td><td></td></tr><tr><td>Body</td><td>Brass</td><td>Gold 5 Over Nickel 50 Over Copper 50</td></tr></table>			Parts	Material	Plating (Micro-inch)	Ferrule	Brass	Gold 5 Over Nickel 50 Over Copper 50	Contact Pin	Phosphor Bronze	Gold 20 Over Nickel 50 Over Copper 50	Insulator	Teflon		Body	Brass	Gold 5 Over Nickel 50 Over Copper 50
Parts	Material	Plating (Micro-inch)															
Ferrule	Brass	Gold 5 Over Nickel 50 Over Copper 50															
Contact Pin	Phosphor Bronze	Gold 20 Over Nickel 50 Over Copper 50															
Insulator	Teflon																
Body	Brass	Gold 5 Over Nickel 50 Over Copper 50															
Weight: Suitable Cables: RG179, RG179-FEP																	

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

MCX8100-0179		DATE	2017/09/05	REV	—
A		B		B	
					
BODY		CONTACT PIN		FERRULE	
DIAGRAM			ASSEMBLY INSTRUCTION		
			Step 1: STRIP AS SHOWN. Step 2: TIN DIP.		
			Step 2: SLIDE FERRULE " C " OVER CABLE. Step 3: PUT CONTACT PIN " B " ON CENTER CONDUCTOR AND CRIMP IN " Y ". (USE SQUARE 0.7mm/0.028inch SECTION OF INSERT-A)		
			Step 5: LOOSEN BRAIDING AND SLIDE CONNECTOR " A " IN PLACE.		
			Step 6: SLIDE FERRULE " B " TOWARDS THE CONNECTOR " A " AND CRIMP. (USE 3.3mm/0.130inch HEX SECTION OF INSERT-A)		
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				Albert	