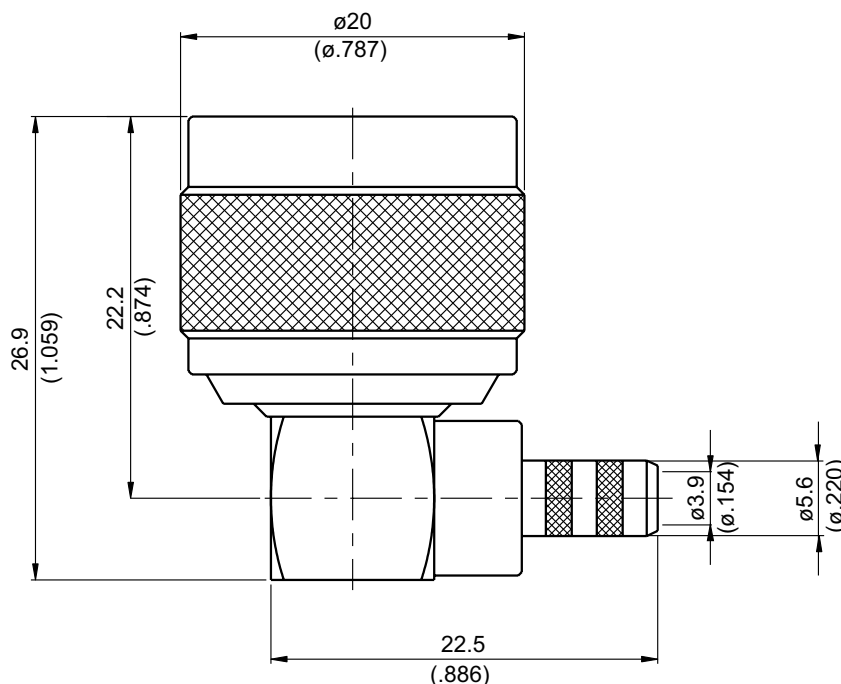


N3100-9059

N Plug Crimp Right Angle For RG59
2GHz VSWR 1.25; 4GHz VSWR 1.35

75Ω



Parts	Material	Plating (Micro-inch)
Ferrule	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicon	
Center Pin	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Insulator	Teflon	
Barrel	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Suitable Cables: RG59

This part number complies with RoHS.

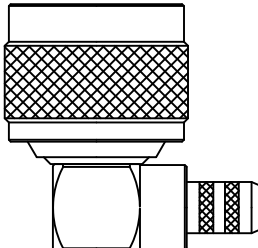
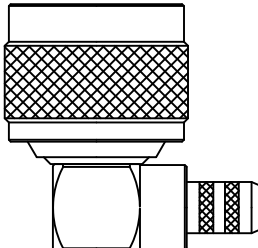
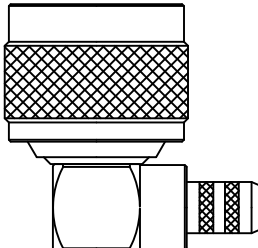
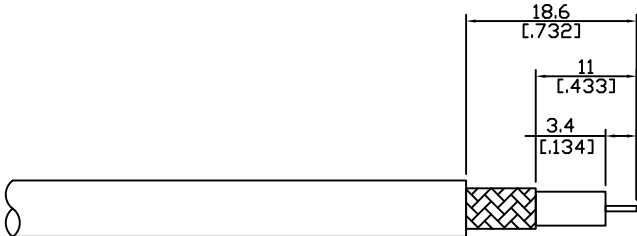
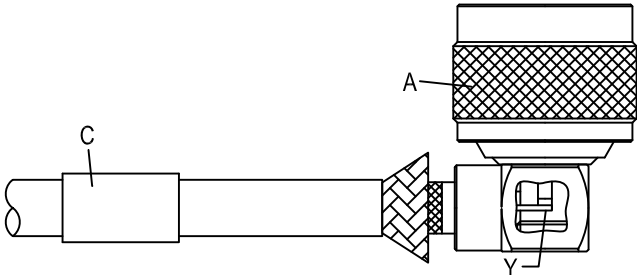
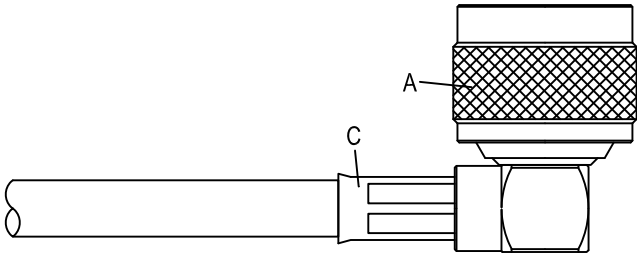
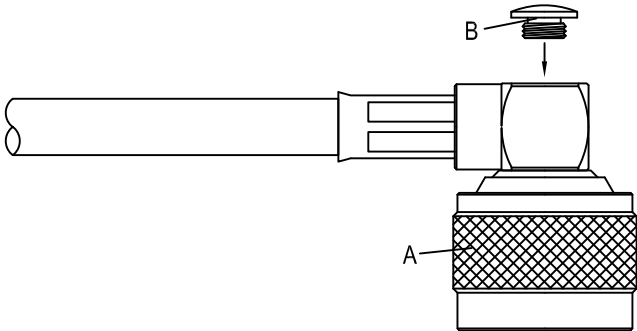
Notice: JYEBAO reserves the right to make modifications deemed appropriate.

N	N3100-9059
Interface MIL-STD-348B	
Electrical Data Impedance Frequency range VSWR Insertion loss Insulation resistance Contact resistance inner conductor Contact resistance outer conductor Dielectric withstanding voltage (at sea level) Working voltage (at sea level) RF leakage 75Ω DC to 4GHz ≤ 1.25 (2GHz); ≤ 1.35 (4GHz) $\leq 0.05 \times \sqrt{f(\text{GHz})}$ dB $\geq 5000\text{M}\Omega$ $\leq 1\text{m}\Omega$ $\leq 1\text{m}\Omega$ 2500 V rms 1000 V rms $\geq 128\text{dB}$ to 1GHz	
Mechanical Data Recommended coupling nut torque Coupling proof torque Coupling nut retention force Contact captivation-axial Durability (mating) 6 to 10 inch lbs 15 inch lbs ≥ 101.2 lbs ≥ 6.3 lbs ≥ 500	
Environmental Data Temperature range Thermal shock Moisture resistance Corrosion RoHS -65°C to +165°C MIL-STD-202, Method 107, Condition B MIL-STD-202, Method 106 MIL-STD-202, Method 101, Condition B Compliant	
Tooling Crimping tool Crimp insert CRT-1 or CRT-2 INSERT-E	

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

N3100-9059		DATE	2014/04/29	REV	—									
<table><tr><td>A</td><td>B</td><td>C</td></tr><tr><td></td><td></td><td></td></tr><tr><td>BODY</td><td>NUT</td><td>FERRULE</td></tr></table>						A	B	C				BODY	NUT	FERRULE
A	B	C												
														
BODY	NUT	FERRULE												
DIAGRAM			ASSEMBLY INSTRUCTION											
			Step 1: STRIP AS SHOWN.											
			Step 2: SLIDE FERRULE " C " OVER CABLE. Step 3: WRAP THE BRAIDING UPWARDS. Step 4: SLIDE CENTER CONDUCTOR ON THE CONTACT PIN OF CONNECTOR " A " AND SOLDER IN " Y ".											
			Step 5: SLIDE FERRULE " C " TOWARDS THE CONNECTOR " A " AND CRIMP. (USE 6.5mm/0.256inch HEX SECTION OF INSERT-E)											
			Step 6: FINALLY SCREW " B " ON THE CONNECTOR BODY " A ".											
This part number complies with RoHS. Notice: JYBAO reserves the right to make modifications deemed appropriate.														
APPROVED		CHECKED		DRAWING										
				Albert										

N3100-9059

