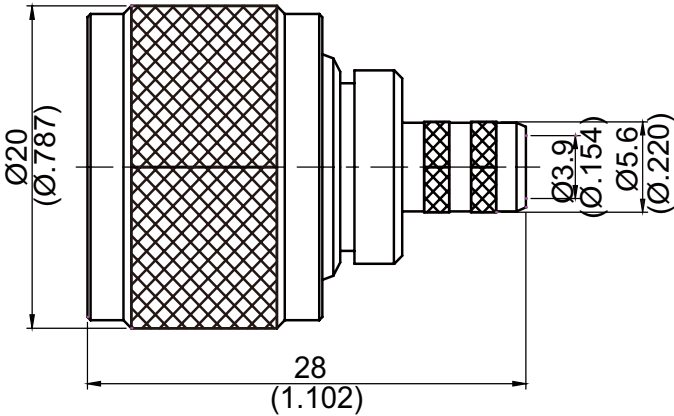


N3100B-JBY59	N Plug Crimp	75Ω																					
																							
<table><tr><th>Parts</th><th>Material</th><th>Plating (Micro-inch)</th></tr><tr><td>Ferrule</td><td>Copper</td><td>Tin-Zinc-Copper-Alloy 100 Over Copper 50</td></tr><tr><td>Gasket</td><td>Silicon</td><td></td></tr><tr><td>Contact Pin</td><td>Brass</td><td>Gold 4 Over Nickel Phosphorous Alloy 80 Over Copper 20</td></tr><tr><td>Insulator</td><td>Teflon</td><td></td></tr><tr><td>Body</td><td>Brass</td><td>Tin-Zinc-Copper-Alloy 100 Over Copper 50</td></tr><tr><td>Coupling Nut</td><td>Brass</td><td>Tin-Zinc-Copper-Alloy 100 Over Copper 50</td></tr></table>			Parts	Material	Plating (Micro-inch)	Ferrule	Copper	Tin-Zinc-Copper-Alloy 100 Over Copper 50	Gasket	Silicon		Contact Pin	Brass	Gold 4 Over Nickel Phosphorous Alloy 80 Over Copper 20	Insulator	Teflon		Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50	Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Parts	Material	Plating (Micro-inch)																					
Ferrule	Copper	Tin-Zinc-Copper-Alloy 100 Over Copper 50																					
Gasket	Silicon																						
Contact Pin	Brass	Gold 4 Over Nickel Phosphorous Alloy 80 Over Copper 20																					
Insulator	Teflon																						
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50																					
Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50																					
Weight: Suitable Cables:JBY59																							

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

N3100B-JBY59

JYE BAO CO., LTD.
TAIPEI TAIWAN R.O.C

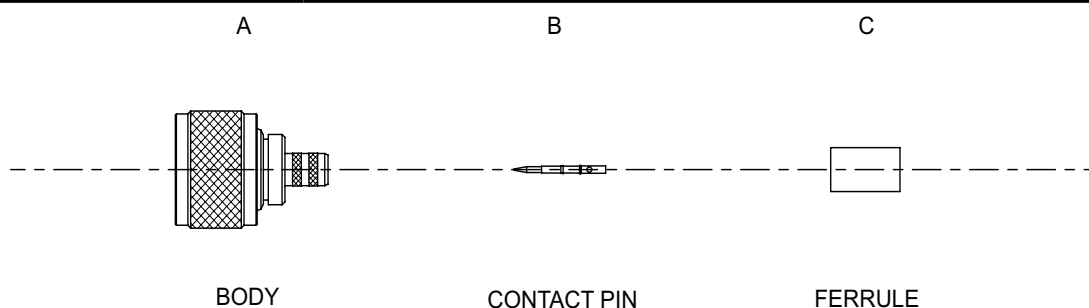


DIAGRAM	ASSEMBLY INSTRUCTION
The diagram shows a cable with a jacket being stripped back. The dimensions for the stripped sections are: 13.5 [.531] for the outer jacket, 5.6 [.220] for the inner insulation, and 4 [.157] for the conductor insulation.	Step 1: STRIP AS SHOWN.
The diagram shows the ferrule C being slid over the cable. The contact pin B is inserted into the center conductor, and the label Y points to the insertion point.	Step 2: SLIDE FERRULE " C " OVER CABLE. Step 3: PUT PIN " B " ON CENTER CONDUCTOR AND SOLDER OR CRIMP IN " Y ". (USE SQUARE 0.98mm/0.039inch SECTION OF INSERT-A IF CRIMPED)
The diagram shows the braiding being loosened and the connector A being slid into place.	Step 4: LOOSEN BRAIDING AND SLIDE CONNECTOR " A " IN PLACE.
The diagram shows the ferrule C being slid towards the connector A and crimped.	Step 5: SLIDE FERRULE " C " TOWARDS THE CONNECTOR " A " AND CRIMP. (USE 6.5mm/0.256inch HEX SECTION OF INSERT-E)

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.