


N3100BA-0059

N Plug Crimp

75Ω

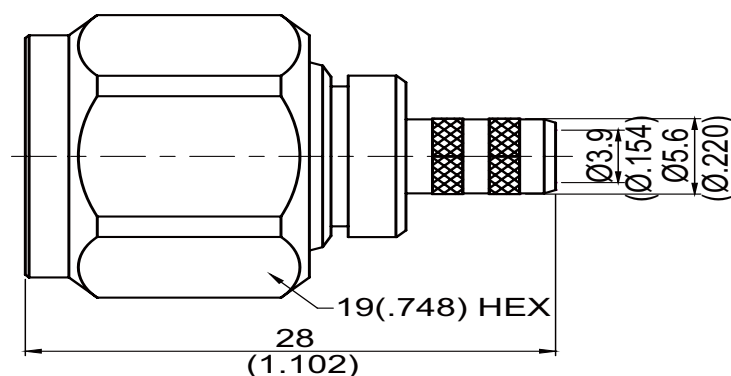

Parts	Material	Plating (Micro-inch)
Ferrule	Copper	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicon	
Contact Pin	Brass	Gold 4 Over Nickel Phosphorous Alloy 80 Over Copper 20
Insulator	Teflon	
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight:
Suitable Cables:RG59

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

N3100BA-0059

JYE BAO CO., LTD.

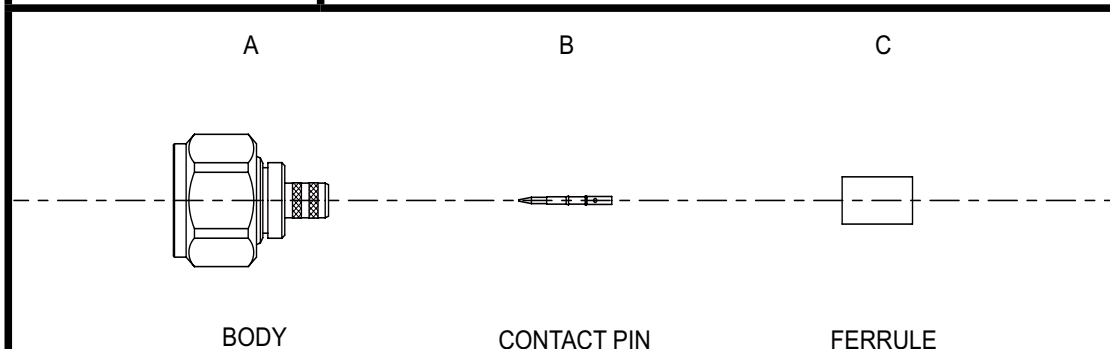


DIAGRAM	ASSEMBLY INSTRUCTION
The diagram shows a cable with a cross-section of 13.5 [531]. The stripping dimensions are 5.6 [220] for the outer jacket, 4 [157] for the insulation on the center conductor, and 13.5 [531] for the total length of the stripped section.	Step 1: STRIP AS SHOWN.
The diagram shows the ferrule (C) being slid over the cable. The contact pin (B) is inserted into the center conductor, and the braiding is labeled 'Y'.	Step 2: SLIDE FERRULE "C" OVER CABLE. Step 3: PUT PIN "B" ON CENTER CONDUCTOR AND SOLDER OR CRIMP IN "Y". (USE 0.98mm/0.039inch SQUARE SECTION OF INSERT-A IF CRIMPED)
The diagram shows the connector (A) being slid over the cable. The ferrule (C) is being crimped onto the center conductor.	Step 4: LOOSEN BRAIDING AND SLIDE CONNECTOR "A" IN PLACE.
The diagram shows the ferrule (C) being slid towards the connector (A) and crimped.	Step 5: SLIDE FERRULE "C" TOWARDS THE CONNECTOR "A" AND CRIMP. (USE 6.5mm/0.256inch HEX SECTION OF INSERT-E)

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.