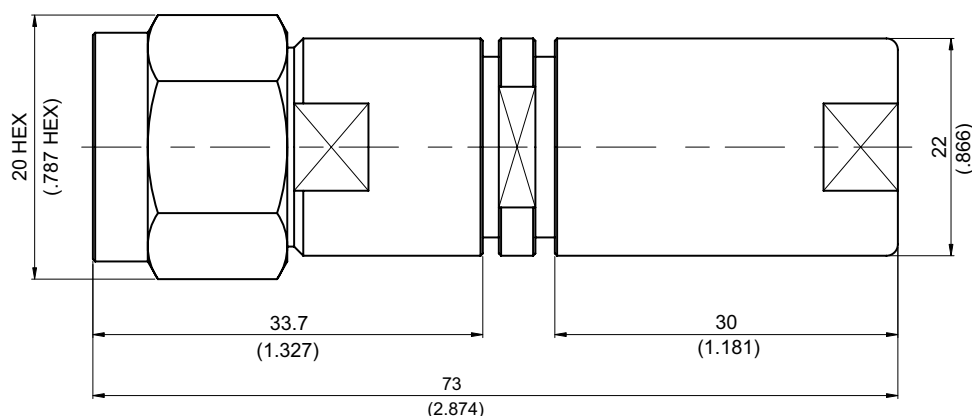


N3200BA-0217

N plug clamp for RG217

50Ω



Parts	Material	Plating (Micro-inch)
Crimp Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Braid Clamp	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Center Pin	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Insulator	Teflon	
Retainer Ring	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicon	
Contact Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

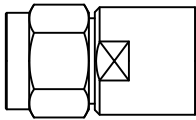

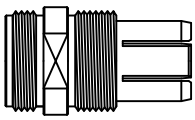
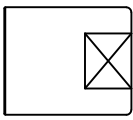
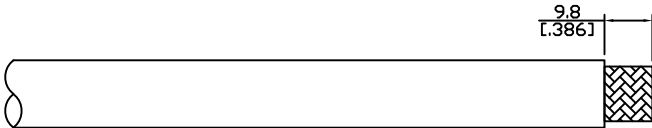
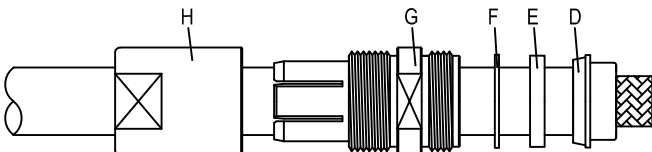
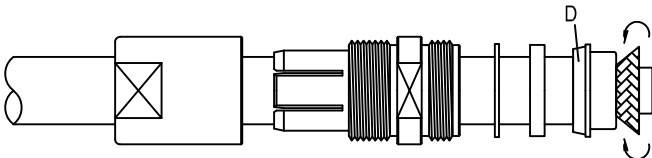
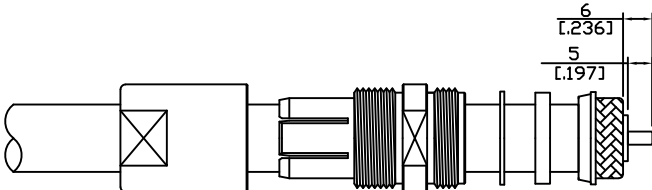
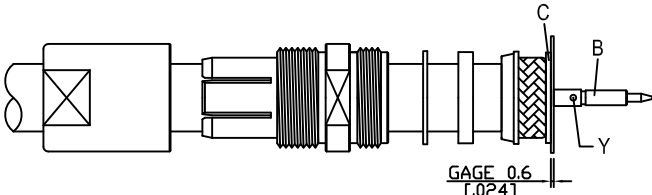
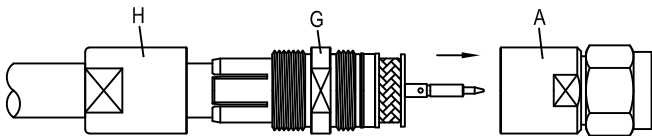
Suitable Cables: RG217

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

N3200BA-0217				DATE	2020/05/30	REV	B
A	B	C	D	E	F	G	H
							
BODY	CONTACT PIN	WASHER	BRAID CLAMP	GASKET	WASHER	NUT	NUT
DIAGRAM				ASSEMBLY INSTRUCTION			
				Step 1: STRIP AS SHOWN.			
				Step 2: SLIDE NUT "H" 、 NUT "G" 、 WASHER "F" 、 GASKET "E" AND BRAID CLAMP "D" OVER CABLE.			
				Step 3: WRAP THE BRAIDING OVER "D" .			
				Step 4: STRIP AS SHOWN.			
				Step 5: SLIDE PREPARED CABLE INTO WASHER "C". Step 6: PUT 0.6 MM GAGE IN PLACE, INSERT CABLE'S CENTER CONDUCTOR INTO CONTACT PIN "B" AND SOLDER IN "Y".			
				Step 7: SCREW NUT "G" ON THE CONNECTOR BODY "A" . Step 9: SCREW NUT "H" ON THE NUT "G" .			
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.							
APPROVED		CHECKED		DRAWING			
				Albert			