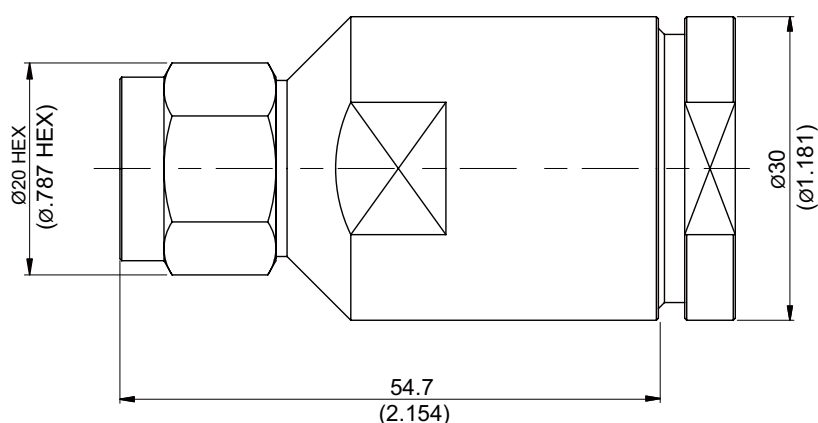


N3200BA-0218

N Plug Clamp

50Ω



Parts	Material	Plating (Micro-inch)
Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Braid Clamp	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Center Pin	Brass	Gold 5 Over Nickel 50 Over Copper 50
Insulator	Teflon	
Retainer Ring	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicon	
Contact Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight:

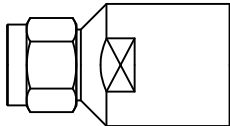


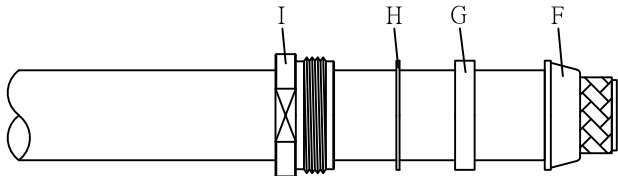
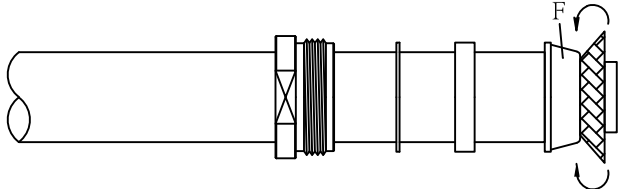
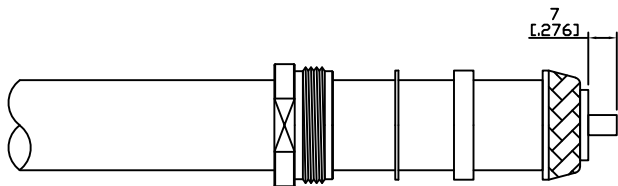
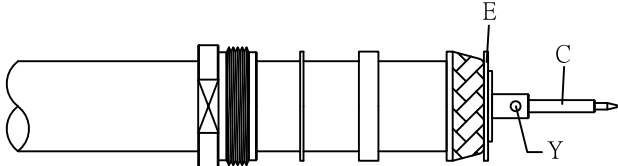
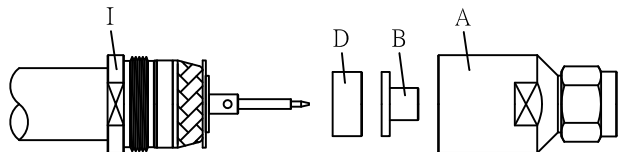
Suitable Cables: RG218

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

N3200BA-0218				DATE	2014/04/29	REV	—	
A	B	C	D	E	F	G	H	I
								
BODY		CONTACT PIN		BRAID CLAMP		GASKET WASHER		NUT
DIAGRAM				ASSEMBLY INSTRUCTION				
				Step 1: STRIP AS SHOWN.				
				Step 2: SLIDE NUT " I " 、 WASHER " H " 、 GASKET " G " AND BRAID CLAMP " F " OVER CABLE.				
				Step 3: WRAP THE BRAIDING OVER " F " .				
				Step 4: STRIP AS SHOWN.				
				Step 5: SLIDE WASHER " E " IN PLACE. Step 6: PUT CONTACT PIN " C " ON CENTER CONDUCTOR AND SOLDER IN " Y " .				
				Step 7: SLIDE INSULATOR " B " AND " D " INTO CONNECTOR BODY " A " . Step 8: FINALLY SCREW NUT " I " ON THE CONNECTOR BODY " A " .				
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.								
APPROVED			CHECKED			DRAWING		
Albert								