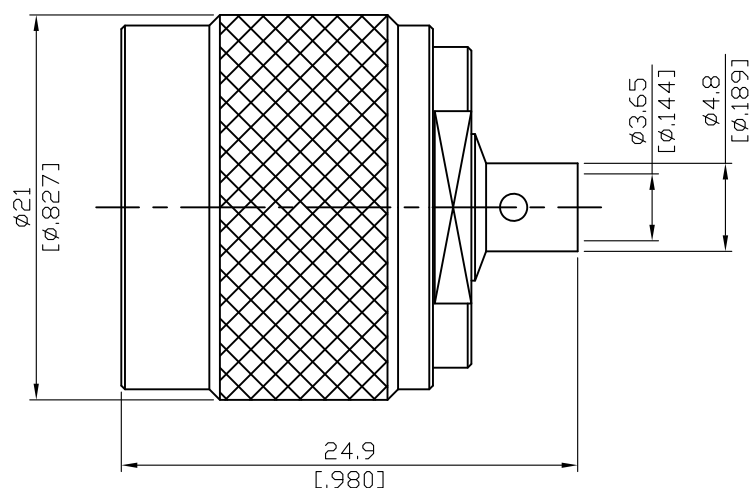


N3300-0141

N Plug Solder For RG402
11GHz VSWR 1.15

50Ω



Parts	Material	Plating (Micro-inch)
Contact Pin	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Retainer Ring	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicone	
Insulator	Teflon	
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Suitable Cables: semi-rigid.141; Conformable .141

This part number complies with RoHS.

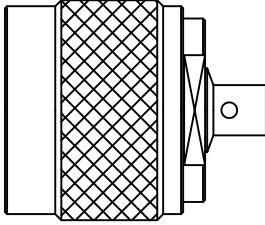


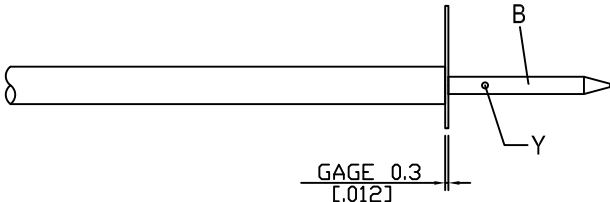
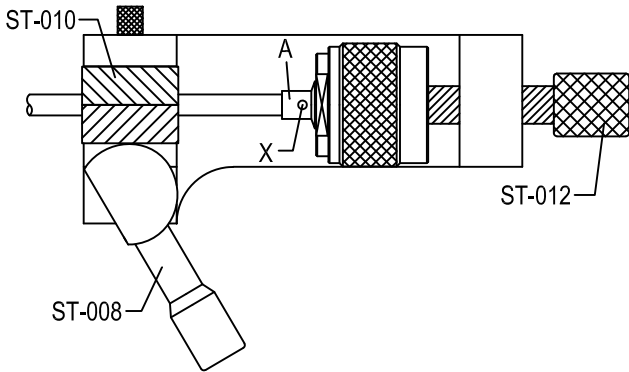
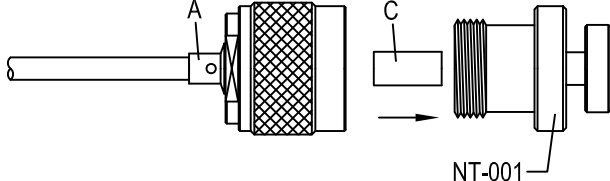
Notice: JYEBAO reserves the right to make modifications deemed appropriate.

N		N3300-0141	
Interface		MIL-STD-348B	
Electrical Data		Impedance 50Ω Frequency range DC to 11GHz VSWR ≤ 1.15 (DC to 11GHz) Insertion loss $\leq 0.05 \times \sqrt{f(\text{GHz})}$ dB Insulation resistance $\geq 5000\text{M}\Omega$ Contact resistance inner conductor $\leq 1.5\text{m}\Omega$ Contact resistance outer conductor $\leq 1\text{m}\Omega$ Dielectric withstanding voltage (at sea level) 2500 V rms Working voltage (at sea level) 1000 V rms	
Mechanical Data		Recommended coupling nut torque 6 to 10 inch lbs Coupling proof torque 15 inch lbs Coupling nut retention force ≥ 101.2 lbs Contact captivation-axial ≥ 6.3 lbs Durability (mating) ≥ 500	
Environmental Data		Temperature range -65°C to +165°C Thermal shock MIL-STD-202, Method 107, Condition B Moisture resistance MIL-STD-202, Method 106 Corrosion MIL-STD-202, Method 101, Condition B RoHS Compliant	
Tooling		Soldering gauge ST-0.3 Dielectric insertion tool NT-001 Locator tool ST-012 Soldering fixture ST-008 Insert for .141 semi-rigid cable ST-010	

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

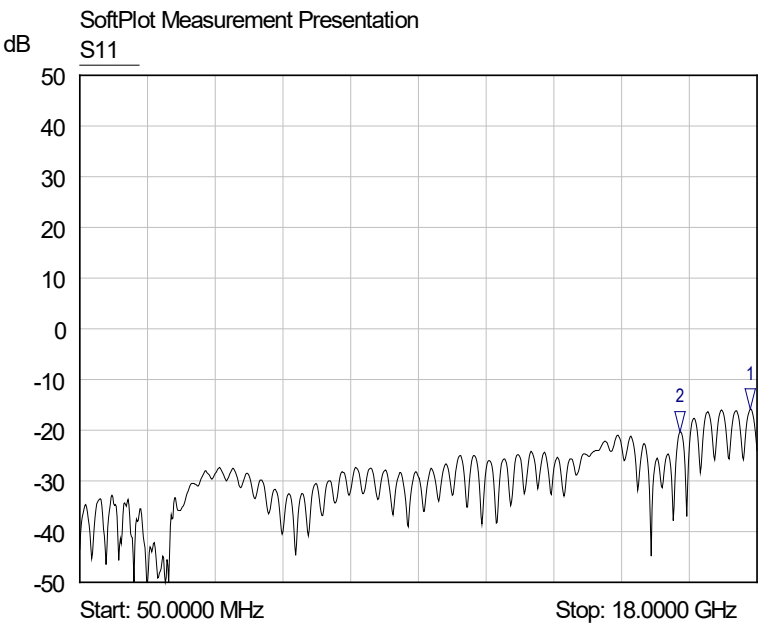
JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

N3300-0141		DATE	2020/05/14	REV	A
A  BODY B  CONTACT PIN C  INSULATOR					
			ASSEMBLY INSTRUCTION		
			Step 1: STRIP AS SHOWN.		
			Step 2: PUT 0.3 MM GAGE ST-0.3 IN PLACE, INSERT CABLE'S CENTER CONDUCTOR INTO CENTER PIN " B " AND SOLDER IN " Y ".		
			Step 3: INSERT PREPARED CABLE INTO SOLDERING FIXTURE " ST-008 ". USE INSERT TOOL " ST-010 " AND LOCATOR TOOL " ST-012 " TO FIX THE CONNECTOR. SOLDER IN " X ".		
			Step 4: USE DIELECTRIC INSERTION TOOL " NT-001 " TO INSERT THE TEFLON " C ".		
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				Albert	

N3300-0141

S11



- 1 S11
▽ 17.8203 GHz
-15.86 dB
- 2 S11
▽ 15.9556 GHz
-20.36 dB