


N6100-L100

N Reverse Polarity Plug Crimp 50Ω

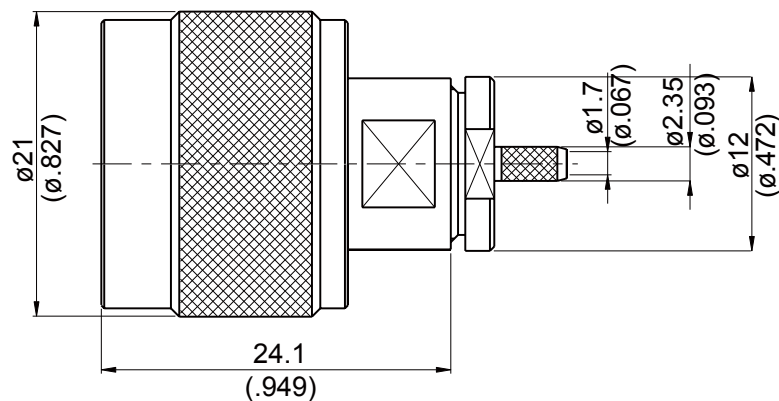

Parts	Material	Plating (Micro-inch)
Ferrule	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Crimping Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Insulator	Teflon	
Contact Pin	Phosphor Bronze	Gold 4 Over Nickel Phosphorous Alloy 80 Over Copper 20
Retainer Ring	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicon	
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight: 33.41g

Suitable Cables: JBY100

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

N6100-L100

JYE BAO CO., LTD.

N6100-L100

DATE

2014/04/29

REV

—


A

B

C

D

E

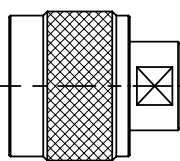


BODY



CONTACT PIN



INSULATOR




CRIMP NUT




FERRULE

DIAGRAM


ASSEMBLY INSTRUCTION

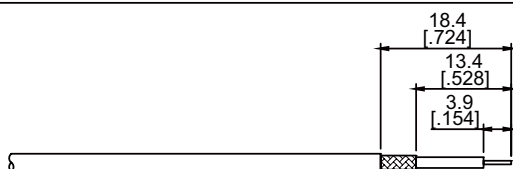


Step 1: STRIP AS SHOWN.

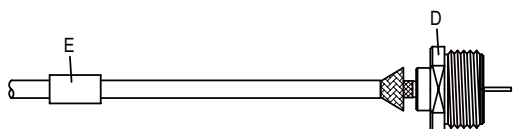


Step 2: SLIDE FERRULE " E " OVER CABLE.
Step 3: LOOSEN BRAIDING AND SLIDE CRIMP NUT " D " IN PLACE.

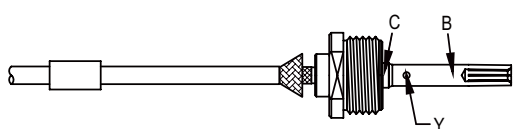

Step 4: PUT INSULATOR " C " AND CONTACT PIN " B " ON CENTER CONDUCTOR AND SOLDER OR CRIMP IN " Y ".
(USE SQUARE 2.4mm/0.094inch SECTION OF INSERT-A IF CRIMPED)

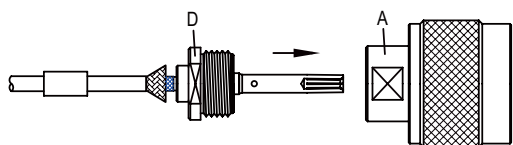

Step 6: SCREW CRIMP NUT " D " ON THE CONNECTOR BODY " A ".

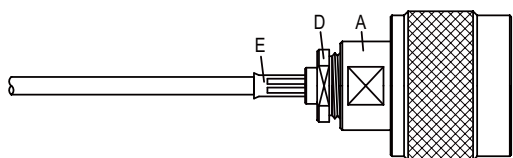

Step 7: SLIDE FERRULE " E " TOWARDS THE CRIMP NUT " D " AND CRIMP.
(USE 3.3mm/0.130inch HEX SECTION OF INSERT-A)

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.