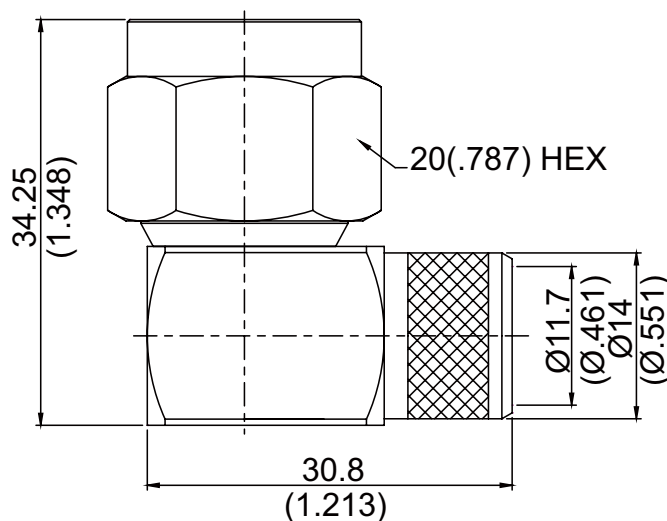


N6100AS-9L600

N Plug Crimp Right Angle

50Ω



Parts	Material	Plating (Micro-inch)
Ferrule	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Retainer Ring	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicon	
Contact Pin	Phosphor Bronze	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Insulator	Teflon	
Bareel	Brass	Passivated
Contact Body	Brass	Passivated
Body	Brass	Passivated
Coupling Nut	Brass	Passivated

Weight:

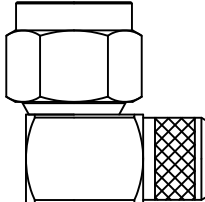
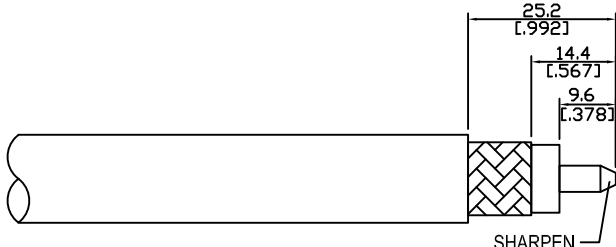
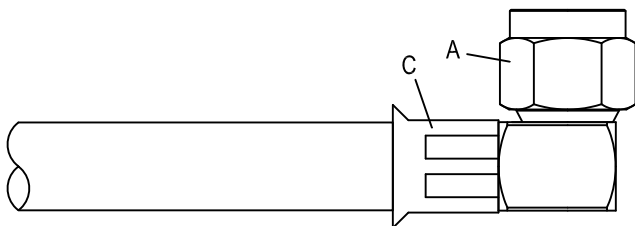
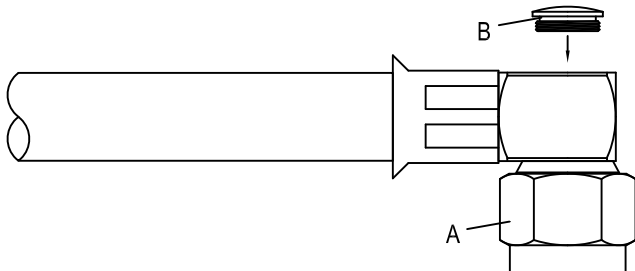
Suitable Cables: JBY600

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

N6100AS-9L600		DATE	2014/04/29	REV	—
A  BODY B  NUT C  FERRULE					
DIAGRAM			ASSEMBLY INSTRUCTION		
			Step 1: STRIP AS SHOWN. Step 2: SHARPEN CENTER CONDUCTOR TIP.		
			Step 3: SLIDE FERRULE " C " OVER CABLE. Step 4: WRAP THE BRAIDING UPWARDS. Step 5: SLIDE CENTER CONDUCTOR ON THE CONTACT PIN OF CONNECTOR " A " AND SOLDER IN " Y ".		
			Step 6: SLIDE FERRULE " C " TOWARDS THE CONNECTOR " A " AND CRIMP. (USE 15.5mm/0.610inch HEX SECTION OF INSERT-FA)		
			Step 7: FINALLY SCREW " B " ON THE CONNECTOR BODY " A ".		
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				Albert	