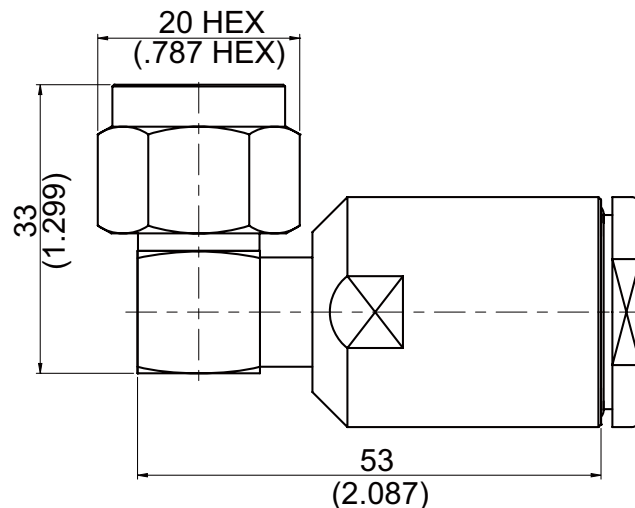


N6200BA-9L600

N Reverse Polarity Plug Clamp Right Angle 50Ω



Note : Spring finger design ensures easy assembly

Parts	Material	Plating (Micro-inch)
Gasket	Silicon	
Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Braid Clamp	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Insulator	Teflon	
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Pin	Phosphor Bronze	Gold 4 Over Nickel Phosphorous Alloy 80 Over Copper 20
Retainer Ring	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Coupling Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight:

Suitable Cables: JBY600

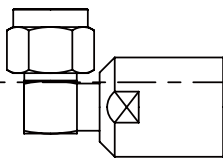
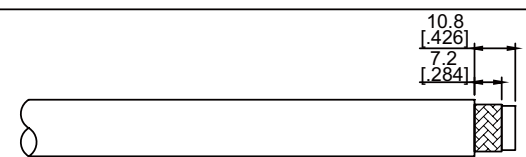
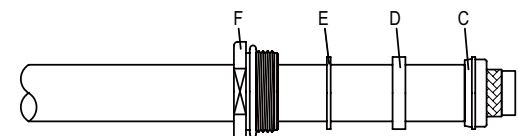
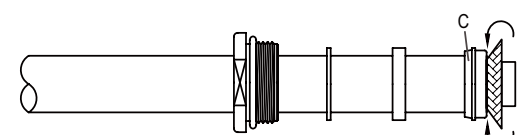
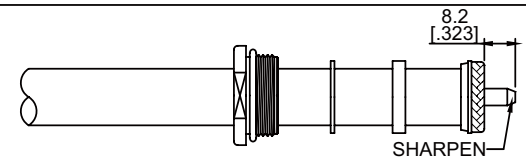
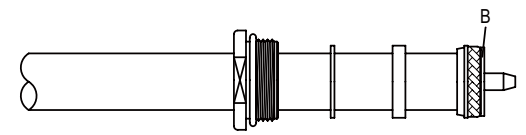
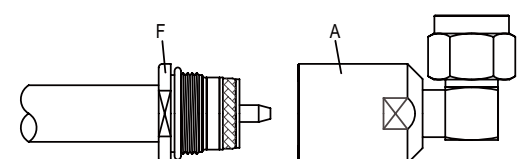
This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

N6200BA-9L600

JYE BAO CO., LTD.

N6200BA-9L600		DATE	2014/04/29	REV	—
A	B	C	D	E	F
					
BODY	WASHER	BRAID CLAMP	GASKET	WASHER	NUT + GASKET
DIAGRAM		ASSEMBLY INSTRUCTION			
		Step 1: STRIP AS SHOWN.			
		Step 2: SLIDE NUT " F ", WASHER " E ", GASKET " D " AND BRAID CLAMP " C " AND OVER CABLE.			
		Step 3: WRAP THE BRAIDING BACKWARD OVER BRAID CLAMP " C ".			
		Step 4: STRIP AS SHOWN. Step 5: SHARPEN CENTER CONDUCTOR TIP.			
		Step 6: SLIDE WASHER " B " IN PLACE.			
		Step 7: FINALLY SCREW NUT " F " ON THE CONNECTOR BODY " A ".			

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.