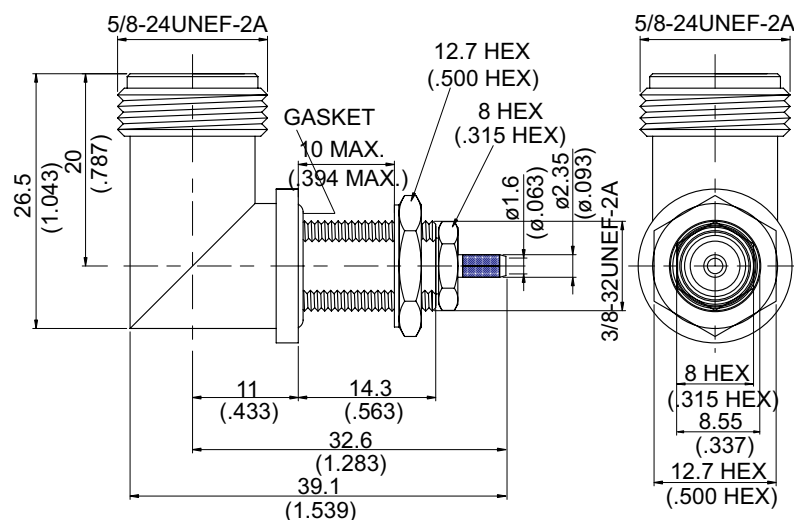
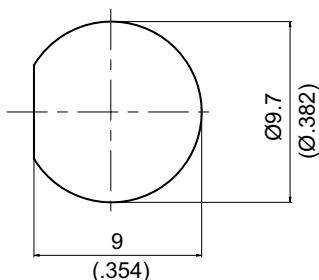


N8105-9316

N Jack Crimp For Bulkhead Right Angle 50Ω



MOUNTING HOLE



Parts	Material	Plating (Micro-inch)
Ferrule	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Hex Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Lock Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Crimp Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Insulator	Teflon	
Gasket	Silicon	
Contact Pin	Phosphor Bronze	Gold 5 Over Nickel 50 Over Copper 50
Contact Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight:

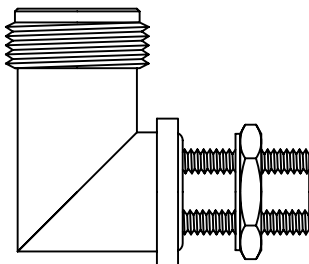

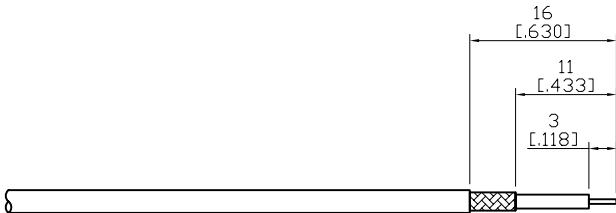
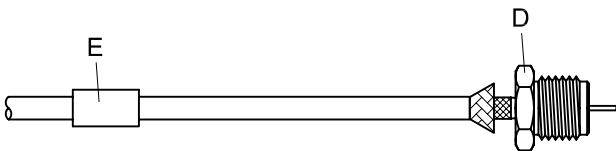
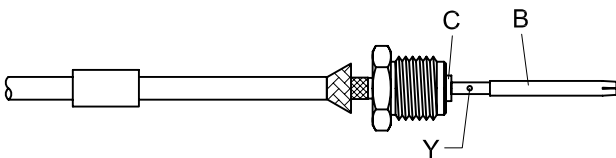
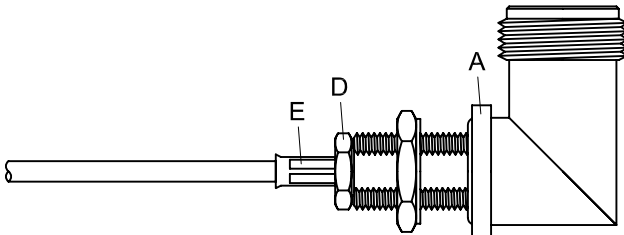
Suitable Cables: RG174, RG188, RG316, RG316-E, RG316-FEP

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

N8105-9316		DATE	2015/07/24	REV	—
A  BODY + GASKET + WASHER + HEX NUT		B  CONTACT PIN	C  INSULATOR	D  CRIMP NUT	E  FERRULE
DIAGRAM		ASSEMBLY INSTRUCTION			
		Step 1: STRIP AS SHOWN.			
		Step 2: SLIDE FERRULE " E " OVER CABLE. Step 3: LOOSEN BRAIDING AND SLIDE CRIMP NUT " D " IN PLACE.			
		Step 4: PUT INSULATOR " C " AND CONTACT PIN " B " ON CENTER CONDUCTOR AND SOLDER IN " Y ".			
		Step 5: SCREW CRIMP NUT " D " ON THE CONNECTOR BODY " A ". Step 6: SLIDE FERRULE " C " TOWARDS THE CRIMP NUT " D " AND CRIMP. (USE 3.3mm/0.130inch HEX SECTION OF INSERT-A)			
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				Albert	