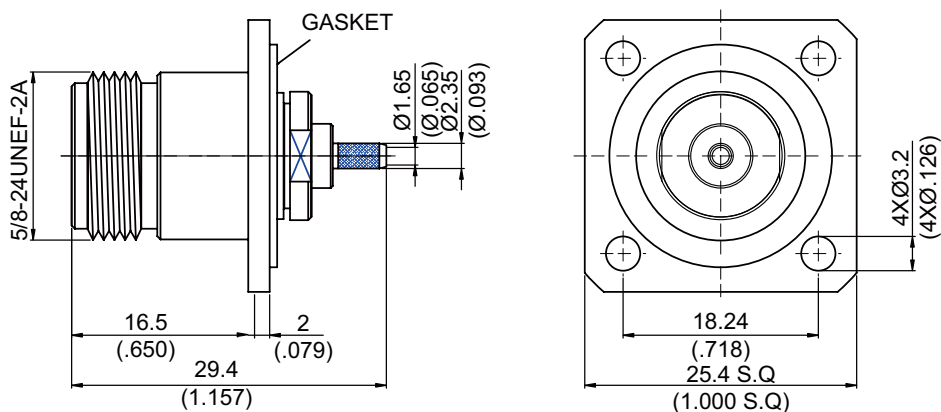
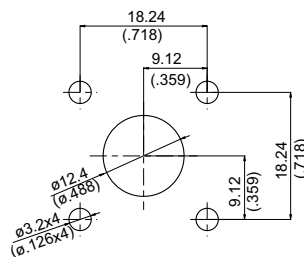


N8146A-0179

N Jack Crimp For Panel Receptacle 75Ω



MOUNTING HOLE



Parts	Material	Plating (Micro-inch)
Gasket	Silicon	
Ferrule	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Barrel	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Insulator	Teflon	
Contact Pin	Beryllium Copper	Gold 5 Over Nickel 50 Over Copper 50
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight: 31.02 g

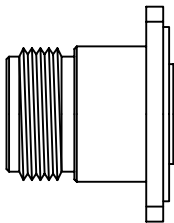

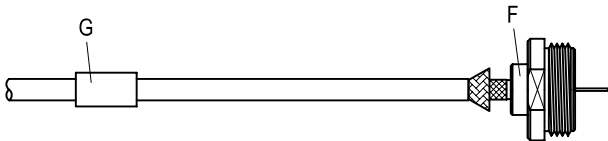
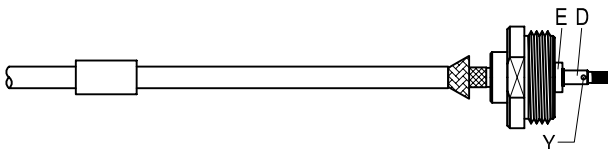
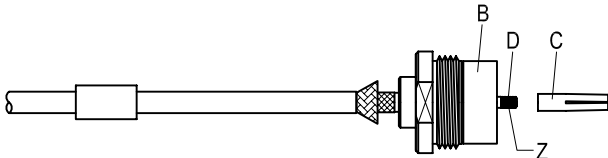
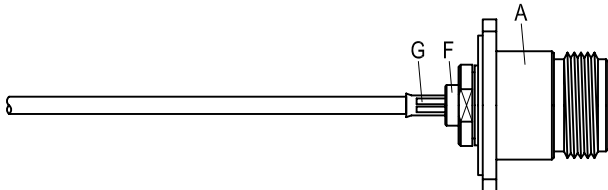
Suitable Cables: RG179, RG179-FEP

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

N8146A-0179			DATE	2017/07/06	REV	—
A	B	C	D	E	F	G
						
BODY + GASKET	INSULATOR	CONTACT PIN	CONTACT PIN	INSULATOR	SOLDER NUT	FERRULE
DIAGRAM			ASSEMBLY INSTRUCTION			
			Step 1: STRIP AS SHOWN.			
			Step 2: SLIDE FERRULE " G " OVER CABLE. Step 3: LOOSEN BRAIDING AND SLIDE SOLDER NUT " F " IN PLACE.			
			Step 4: PUT TEFLON " E " AND CONTACT PIN " D " AND ON CENTER CONDUCTOR AND SOLDER IN " Y ".			
			Step 5: SLIDE TEFLON " B " IN PLACE. Step 6: SCREW CONTACT PIN " C " ON CONTACT PIN " D ". ADD LOCTITE P/N: 271 IN " Z ".			
			Step 7: SCREW SOLDER NUT " F " ON THE CONNECTOR BODY " A ". Step 8: SLIDE FERRULE " G " TOWARDS SOLDER NUT " F " AND CRIMP. (USE 3.3mm/0.130inch HEX SECTION OF INSERUT-A)			
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.						
APPROVED		CHECKED		DRAWING		
				Albert		