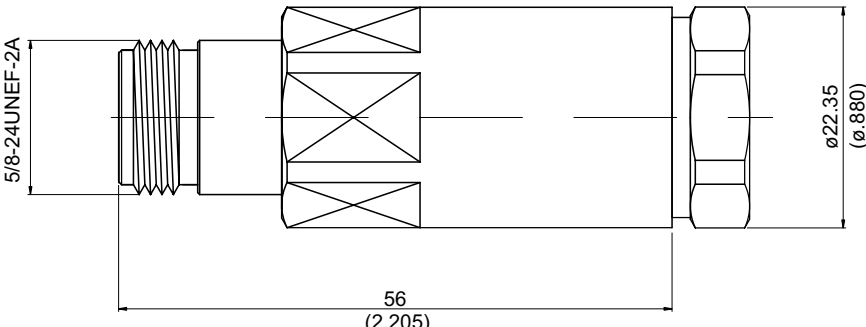


N8200B-LDF4	N Jack Clamp	50Ω																		
																				
<table><tr><th>Parts</th><th>Material</th><th>Plating (Micro-inch)</th></tr><tr><td>Gasket</td><td>Silicon</td><td></td></tr><tr><td>Contact Pin</td><td>Phosphor Bronze</td><td>Gold 5 Over Copper 50 Over Copper 50</td></tr><tr><td>Contact Body</td><td>Brass</td><td>Tin-Zinc-Copper-Alloy 100 Over Copper 50</td></tr><tr><td>Insulator</td><td>Teflon</td><td></td></tr><tr><td>Body</td><td>Brass</td><td>Tin-Zinc-Copper-Alloy 100 Over Copper 50</td></tr></table>			Parts	Material	Plating (Micro-inch)	Gasket	Silicon		Contact Pin	Phosphor Bronze	Gold 5 Over Copper 50 Over Copper 50	Contact Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50	Insulator	Teflon		Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Parts	Material	Plating (Micro-inch)																		
Gasket	Silicon																			
Contact Pin	Phosphor Bronze	Gold 5 Over Copper 50 Over Copper 50																		
Contact Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50																		
Insulator	Teflon																			
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50																		
Weight: 94.68 g Suitable Cables: LDF4-50A, RF 1/2”BHF																				

This part number complies with RoHS.
Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

N8200B-LDF4

JYE BAO CO., LTD.

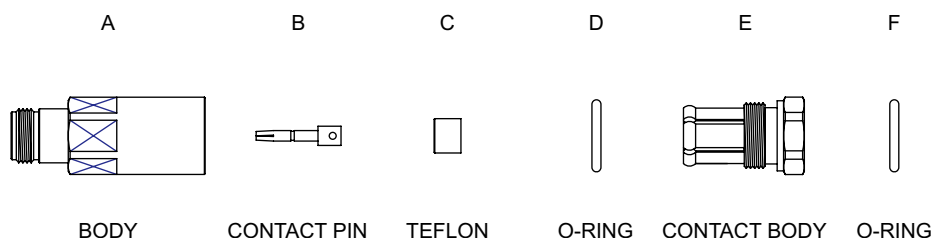


DIAGRAM	ASSEMBLY INSTRUCTION
	Step 1: STRIP AS SHOWN .
	Step 2: PUT VASELINE ON " F " AND SLIDE O-RING " F " OVER CABLE .
	Step 3: SLIDE CONTACT BODY " E " OVER CABLE .
	Step 4: PUT VASELINE ON " D " AND SLIDE O-RING " D " OVER THE CONTACT BODY " E " . Step 5: PUT 0.15 MM GAGE IN PLACE, INSERT CABLE'S CENTER CONDUCTOR INTO CENTER PIN " B " AND SOLDER IN " Y " .
	Step 6: SLIDE PIN " B " INTO TEFLON " C " .
	Step 7: FINALLY SCREW " E " ON THE CONNECTOR BODY " A " .

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.