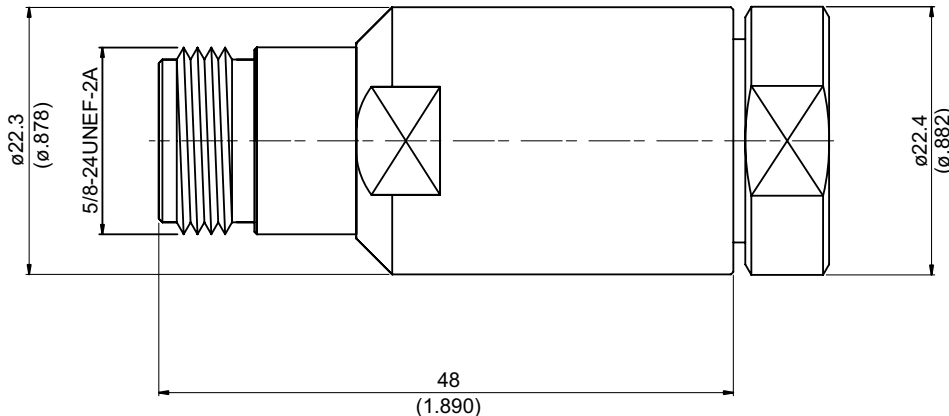


N8200B1-LDF4	N Jack Clamp	50Ω																		
																				
<table><tr><th>Parts</th><th>Material</th><th>Plating (Micro-inch)</th></tr><tr><td>Gasket</td><td>Silicon</td><td></td></tr><tr><td>Nut</td><td>Brass</td><td>Tin-Zinc-Copper-Alloy 100 Over Copper 50</td></tr><tr><td>Contact Pin</td><td>Phosphor Bronze</td><td>Gold 5 Over Nickel 50 Over Copper 50</td></tr><tr><td>Insulator</td><td>Teflon</td><td></td></tr><tr><td>Body</td><td>Brass</td><td>Tin-Zinc-Copper-Alloy 100 Over Copper 50</td></tr></table>			Parts	Material	Plating (Micro-inch)	Gasket	Silicon		Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50	Contact Pin	Phosphor Bronze	Gold 5 Over Nickel 50 Over Copper 50	Insulator	Teflon		Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Parts	Material	Plating (Micro-inch)																		
Gasket	Silicon																			
Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50																		
Contact Pin	Phosphor Bronze	Gold 5 Over Nickel 50 Over Copper 50																		
Insulator	Teflon																			
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50																		
Weight: 106.69 g Suitable Cables: FSJ4-50B; RFF 1/2"-50																				

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

N8200B1-LDF4

JYE BAO CO., LTD.

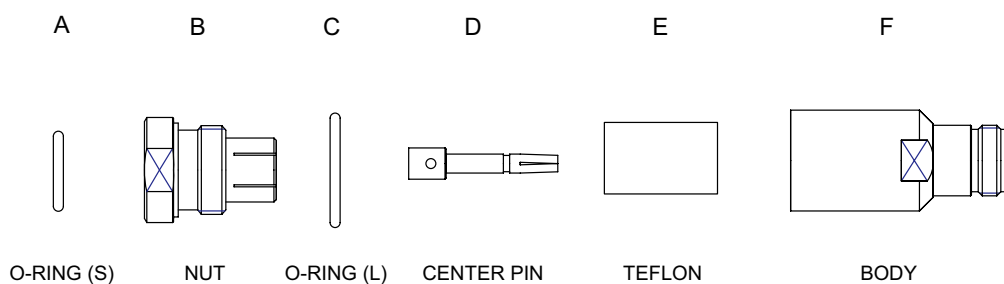


DIAGRAM	ASSEMBLY INSTRUCTION
	Step 1: STRIP AS SHOWN.
	Step 2: SLIDE O-RING "A" AND NUT "B" OVER THE CABLE.
	Step 3: SLIDE O-RING "C" OVER THE NUT "B". Step 4: PUT CENTER PIN "D" ON CENTER CONDUCTOR. Step 5: SOLDER CENTER PIN IN "Y".
	Step 6: SLIDE PIN "D" INTO TEFLON "E".
	Step 7: FINALLY SCREW "B" ON THE CONNECTOR BODY "F".

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.