



N8205B-0058

N Jack Clamp For Bulkhead

50Ω

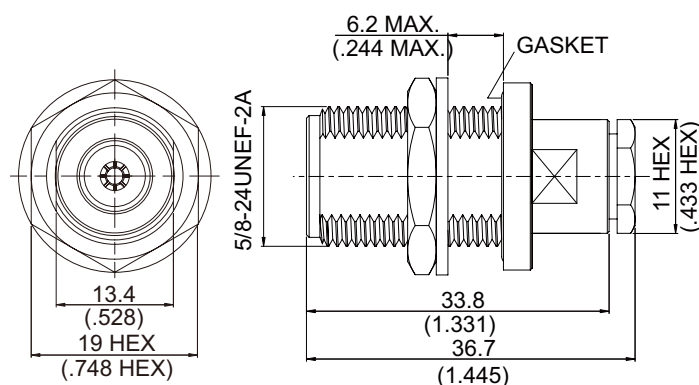

MOUNTING HOLE

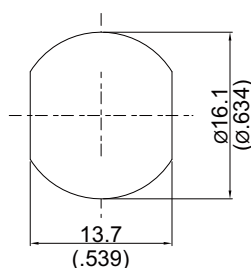

Parts	Material	Plating (Micro-inch)
Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicon	
Braid Clamp	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Hex Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Lock Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Pin	Phosphor Bronze	Gold 5 Over Nickel 50 Nickel Copper 50
Insulator	Teflon	
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight:

Suitable Cables: RG55, RG58, RG142, RG142-E, RG400, JBY195

IP67(Mated)

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

N8205B-0058

JYE BAO CO., LTD.

N8205B-0058

DATE

2014/04/29

REV

—

A

B


C

D

E

F

G



BODY + LOCK WASHER
+ GASKET + HEX NUT

CONTACT
PIN

WASHER

BRAID
CLAMP

GASKET


WASHER

NUT


ASSEMBLY INSTRUCTION




Step 1: STRIP AS SHOWN.




Step 2: SLIDE NUT "G"、WASHER "F"、GASKET "E" AND BRAID CLAMP "D" OVER CABLE.




Step 3: WRAP THE BRAIDING OVER "D".



Step 4: STRIP AS SHOWN.



Step 5: SLIDE PREPARED CABLE INTO WASHER "C".
Step 6: PUT CONTACT PIN "B" ON CENTER CONDUCTOR AND SOLDER OR CRIMP IN "Y".
(USE SQUARE 2.4mm/0.094inch SECTION OF INSERT-A IF CRIMPED)

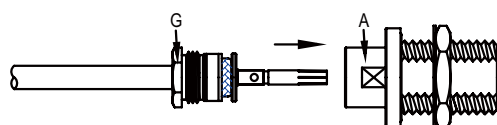

Step 7: FINALLY SCREW "G" ON THE CONNECTOR BODY "A".

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.