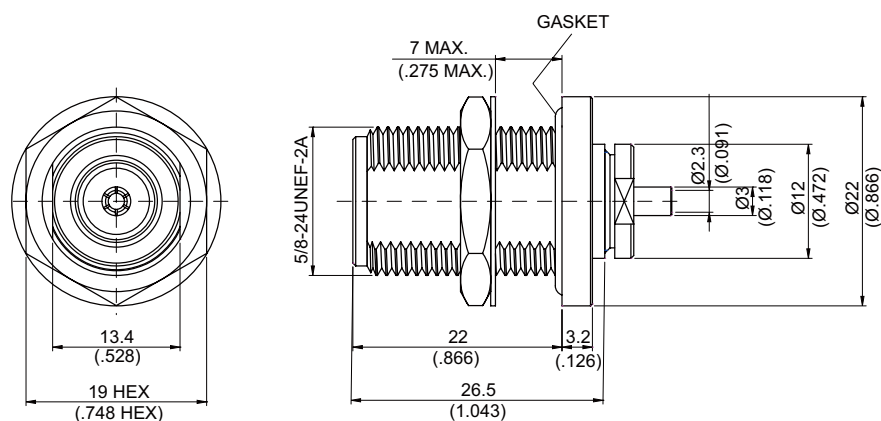


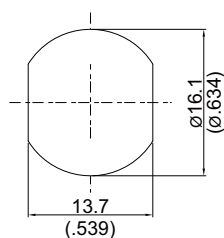
N8305-0085/EP

N Jack Bulkhead Solder

50Ω



MOUNTING HOLE



Parts	Material	Plating (Micro-inch)
Hex Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Lock Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicon	
Crimp Nut	Brass	Gold 5 Over Nickel 50 Over Copper 5
Insulator	Teflon	
Contact Pin	Phosphor Bronze	Gold 5 Over Nickel 50 Over Copper 5
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight:
Suitable Cables: Semi-rigid.085

IP67(Mated)

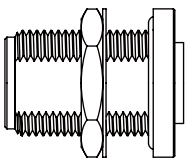

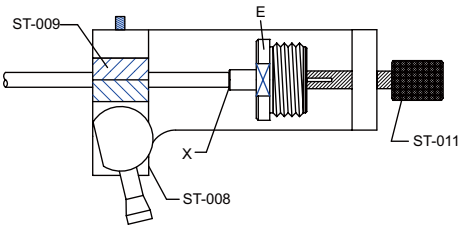




This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

N8305-0085/EP

JYE BAO CO., LTD.

A  BODY+GASKET +HEX NUT+LOCK WASHER B  INSULATOR C  CONTACT PIN D  INSULATOR E  SOLDER NUT	
DIAGRAM	ASSEMBLY INSTRUCTION
	Step 1: STRIP AS SHOWN .
	Step 2: INSERT PREPARED CABLE INTO SOLDER NUT " E " AND USE SOLDERING FIXTURE " ST-008 ", INSERT TOOL " ST-009 " AND LOCATOR TOOL " ST-011 " TO FIX THE CONNECTOR. SOLDER IN " X " .
	Step 3: CUT AWAY ANY EXCESS TEFLON STICKING OUT OF THE SOLDER NUT.
	Step 4: PUT INSULATOR " D " AND CONTACT PIN " C " ON CENTER CONDUCTOR AND SOLDER IN " Y " .
	Step 5: PUT INSULATOR " B " ON CONTACT PIN AND ADD EPOXY IN " Z " . WAIT UNTIL EPOXY HAS DRIED BEFORE MOVING TO STEP 6.
	Step 6: SCREW " E " ON THE CONNECTOR BODY " A " .

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.