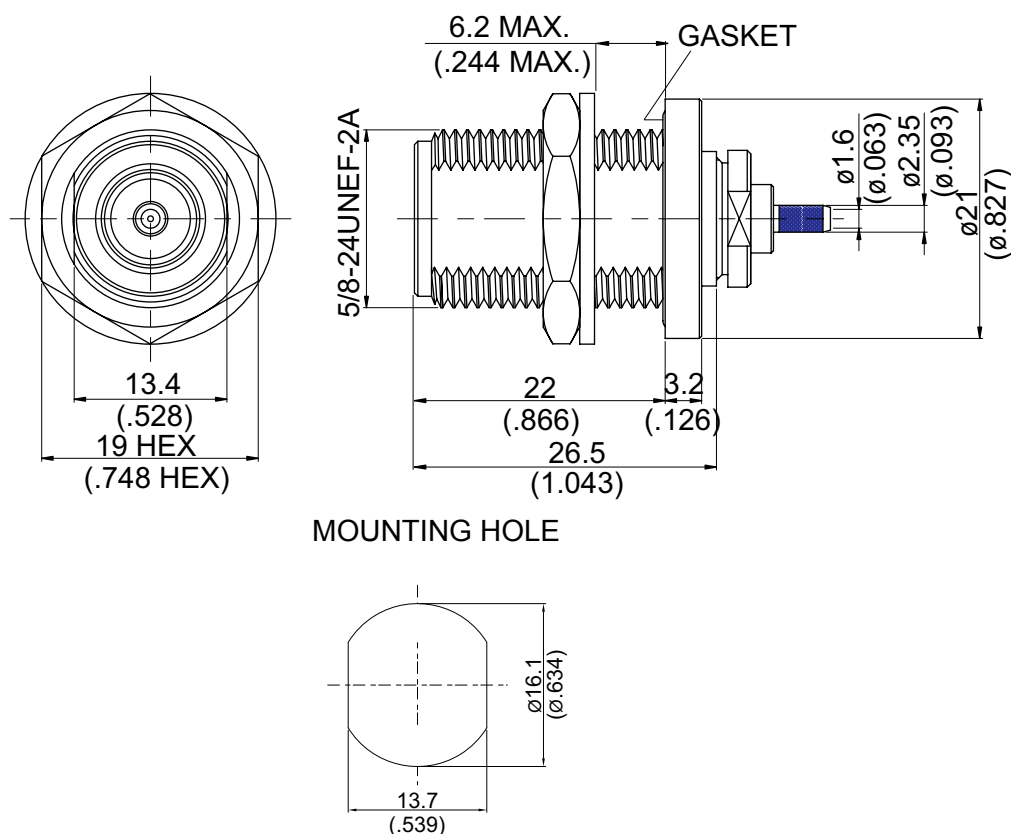


N9105-0316

N Reverse Polarity Jack Crimp For Bulkhead 50Ω



Parts	Material	Plating (Micro-inch)
Hex Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Lock Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicon	
Ferrule	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Crimp Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Insulator	Teflon	
Contact Pin	Brass	Gold 5 Over Nickel 50 Over Copper 50
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight: 37.60 g

Suitable Cables: RG174,RG188,RG316,RG316-E,RG316-FEP

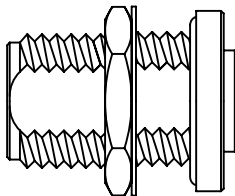


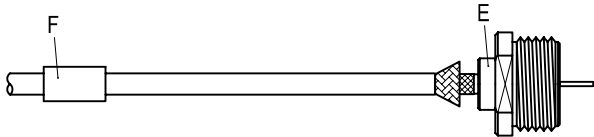
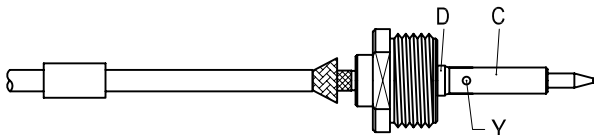
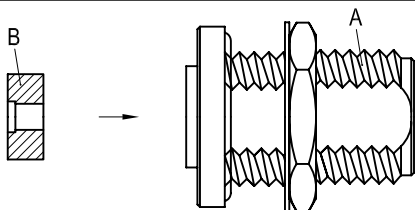
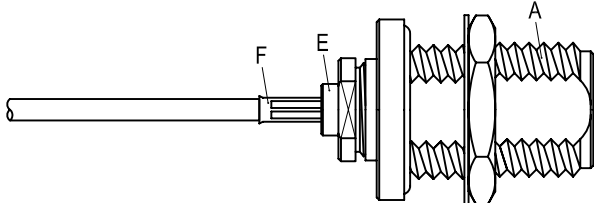
IP67(Mated)

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

N9105-0316		DATE	2017/07/06	REV	—
A	B	C	D	E	F
					
BODY + HEX NUT + WASHER + GASKET	INSULATOR	CONTACT	INSULATOR	CRIMP NUT	FERRULE
DIAGRAM		ASSEMBLY INSTRUCTION			
		Step 1: STRIP AS SHOWN.			
		Step 2: SLIDE FERRULE " F " OVER CABLE. Step 3: LOOSEN BRAIDING AND SLIDE CRIMP NUT " E " IN PLACE.			
		Step 4: PUT INSULATOR " D " AND CONTACT PIN " C " ON CENTER CONDUCTOR AND SOLDER OR CRIMP IN " Y ". (USE SQUARE 2.4mm/0.094inch SECTION OF INSERT-A IF CRIMPED)			
		Step 5: SLIDE INSULATOR " B " INTO CONNECTOR BODY " A ".			
		Step 6: SCREW CRIMP NUT " E " ON THE CONNECTOR BODY " A ". Step 7: SLIDE FERRULE " F " TOWARDS " E " AND CRIMP. (USE 3.3mm/0.130inch HEX SECTION OF INSERT-A)			
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				Albert	