



N9146A-0316

N Reverse Polarity Jack Crimp For Panel Receptacle
50Ω

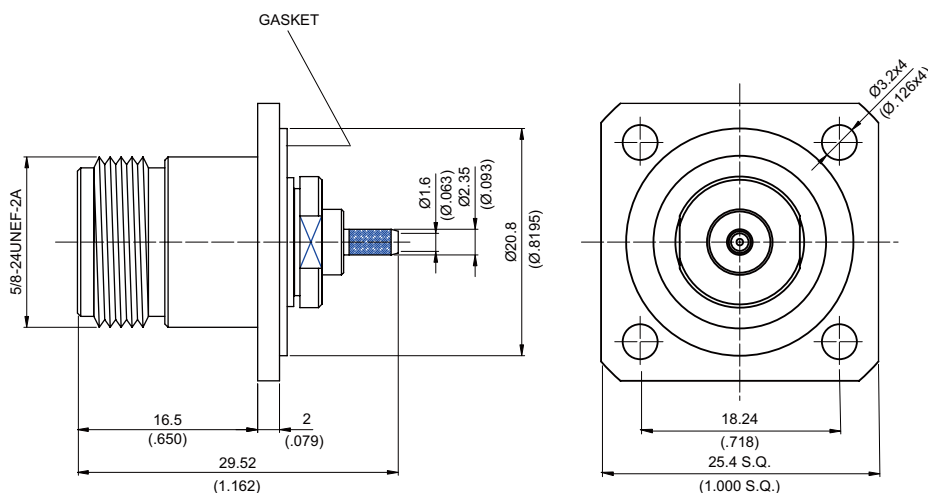

MOUNTING HOLE :

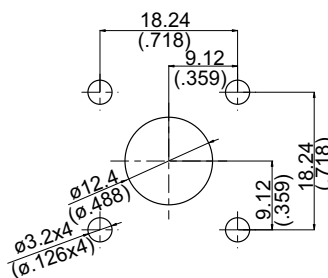

Parts	Material	Plating (Micro-inch)
Gasket	Silicon	
Ferrule	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Solder Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Insulator	Teflon	
Contact Pin	Brass	Gold 5 Over Nickel 50 Over Copper 50
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight:

Suitable Cables: RG174, RG188, RG316, RG316-E, RG316-FEP

IP67(Mated)

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

N9146A-0316

JYE BAO CO., LTD.

N9146A-0316

DATE

2015/01/19

REV

—

A


B

C

D

E

F

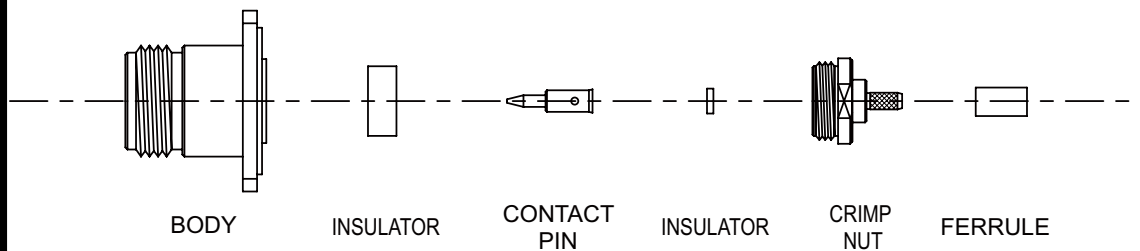

BODY

INSULATOR

CONTACT
PIN

INSULATOR

CRIMP
NUT


FERRULE

DIAGRAM


ASSEMBLY INSTRUCTION




Step 1: STRIP AS SHOWN.

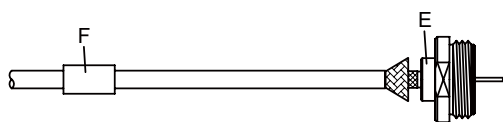


Step 2: SLIDE FERRULE " F " OVER CABLE.
Step 3: LOOSEN BRAIDING AND SLIDE CRIMP NUT " E " IN PLACE.

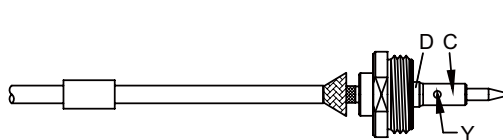

Step 4: PUT INSULATOR " D " AND CONTACT PIN " C " ON CENTER CONDUCTOR AND SOLDER OR CRIMP IN " Y ".
(USE SQUARE 2.4mm/0.094inch SECTION OF INSERT-A IF CRIMPED)

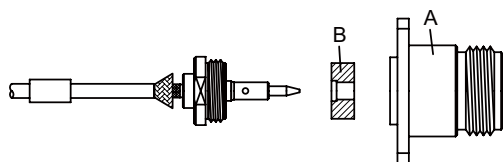

Step 5: SLIDE INSULATOR " B " INTO CONNECTOR BODY " A ".

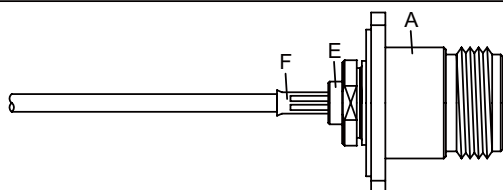

Step 6: SCREW CRIMP NUT " E " ON THE CONNECTOR BODY " A ".
Step 7: SLIDE FERRULE " F " TOWARDS THE CRIMP NUT " E " AND CRIMP.
(USE 3.3mm/0.130inch HEX SECTION OF INSERT-A)

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.