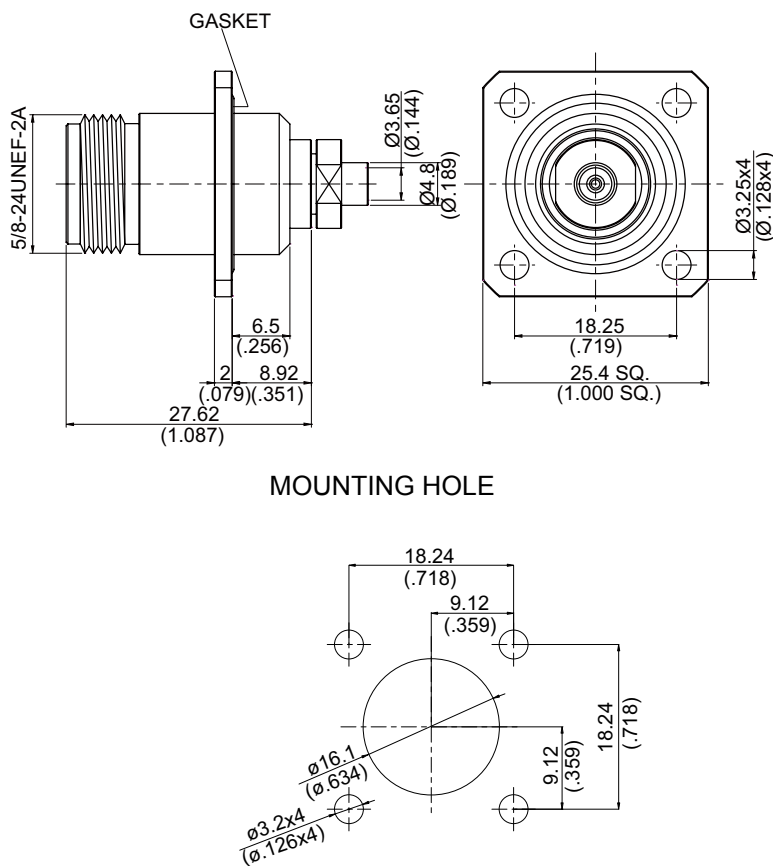


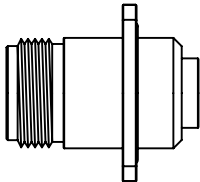
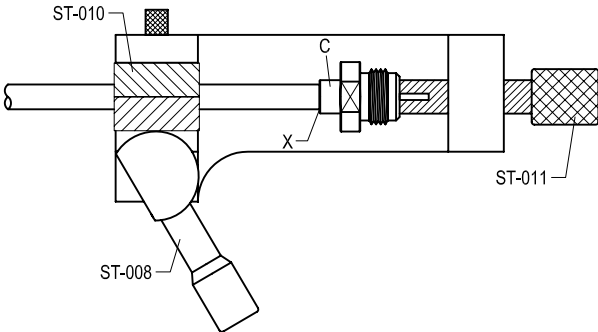

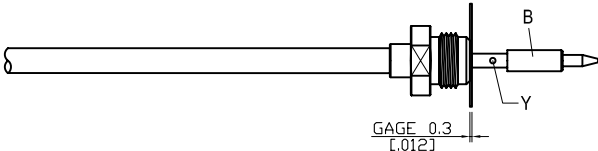
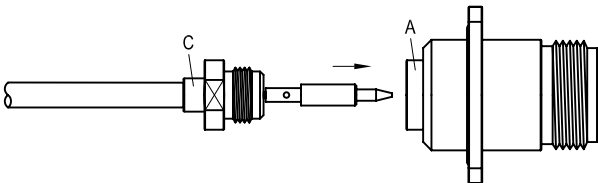
N9346PG-0141	N Reverse Polarity Jack Solder Clamp For Panel Receptacle		50Ω																					
 MOUNTING HOLE																								
<table><tr><th>Parts</th><th>Material</th><th>Plating (Micro-inch)</th></tr><tr><td>Gasket</td><td>Silicon</td><td></td></tr><tr><td>Solder Nut</td><td>Brass</td><td>Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20</td></tr><tr><td>Contact Body</td><td>Brass</td><td>Tin-Zinc-Copper-Alloy 100 Over Copper 50</td></tr><tr><td>Contact Pin</td><td>Brass</td><td>Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20</td></tr><tr><td>Insulator</td><td>Teflon</td><td></td></tr><tr><td>Body</td><td>Brass</td><td>Tin-Zinc-Copper-Alloy 100 Over Copper 50</td></tr></table>				Parts	Material	Plating (Micro-inch)	Gasket	Silicon		Solder Nut	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20	Contact Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50	Contact Pin	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20	Insulator	Teflon		Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Parts	Material	Plating (Micro-inch)																						
Gasket	Silicon																							
Solder Nut	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20																						
Contact Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50																						
Contact Pin	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20																						
Insulator	Teflon																							
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50																						
Weight: Suitable Cables:Semi-rigid.141			IP67(Mated)																					

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

N9346PG-0141		DATE	2017/07/06	REV	—
A  BODY + GASKET B  CONTACT PIN C  SOLDER NUT					
DIAGRAM			ASSEMBLY INSTRUCTION		
			Step 1: STRIP AS SHOWN.		
			Step 2: USE SOLDERING FIXTURE " ST-008 ", INSERT TOOL " ST-010 " AND LOCATOR TOOL " ST-011 " TO FIX THE CONNECTOR. SOLDER IN " X ".		
			Step 3: CUT AWAY ANY EXCESS TEFLON STICKING OUT OF THE SOLDER NUT.		
			Step 4: PUT 0.3 MM GAGE ST-0.3 IN PLACE, INSERT CABLE'S CENTER CONDUCTOR INTO CENTER PIN " B " AND SOLDER IN " Y ".		
			Step 5: SCREW NUT " C " ON THE CONNECTOR BODY " A ".		
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				<i>Albert</i>	