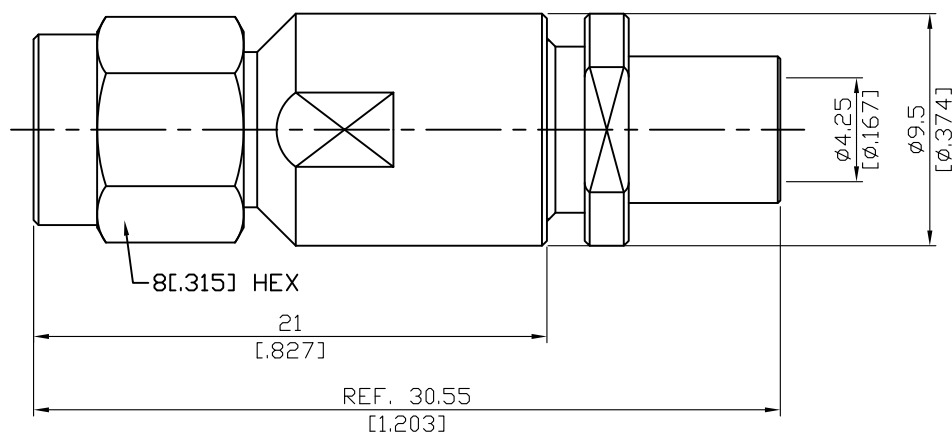


PC3.5-3200S-53LD

3.5mm Plug Solder Clamp For 5003LD, LL160;
26.5GHz VSWR 1.2*

50Ω



Note:

1. Precision connector up to 26.5GHz
2. Solder clamp design ensures a sturdy connector/cable connection
3. Manufacturing low loss high frequency RF assemblies requires expertise.

*Using 5003LD

Parts	Material	Plating (Micro-inch)
Coupling Nut	Stainless Steel	Passivated
Body	Stainless Steel	Passivated
Insulator	PPO	
Contact Pin	Beryllium Copper	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Gasket	Silicone	
Retainer Ring	Beryllium Copper	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Solder Ferrule	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Clamp Nut	Stainless Steel	Passivated

Suitable Cables: 5003LD, LL160

This part number complies with RoHS.




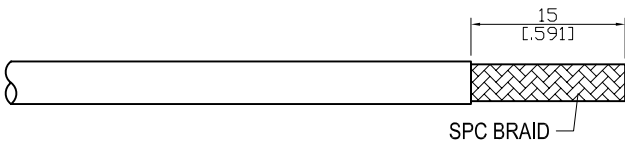

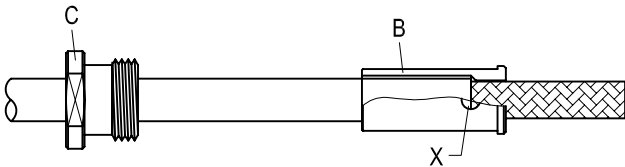
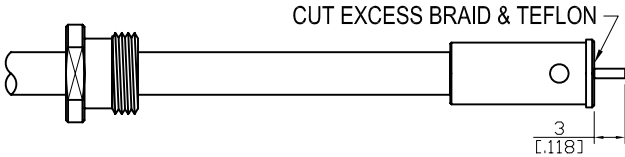
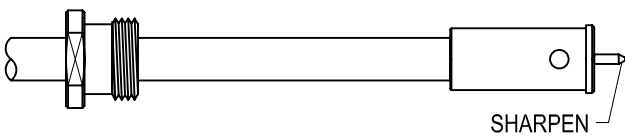
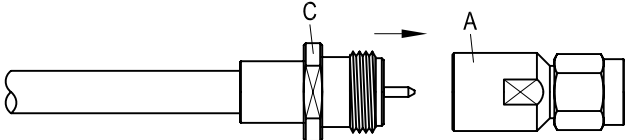
Notice: JYEBAO reserves the right to make modifications deemed appropriate.

3.5	PC3.5-3200S-53LD
Interface IEC 60169-23 Mechanically compatible with 2.92 & SMA	
Electrical Data Impedance 50Ω Frequency range DC to 26.5GHz VSWR ≤ 1.2 to 26.5GHz Insertion loss $\leq 0.03 \times \sqrt{f(\text{GHz})}$ dB Insulation resistance $\geq 5000\text{M}\Omega$ Dielectric withstanding voltage (at sea level) 1000 V rms Working voltage (at sea level) 335 V rms RF leakage $\geq 100\text{dB}$ to 1GHz	
Mechanical Data Recommended coupling nut torque 7.1 to 9.7 inch lbs Coupling proof torque 15 inch lbs Coupling nut retention force ≥ 60.7 lbs Contact captivation-axial ≥ 6.1 lbs Durability (mating) ≥ 500	
Environmental Data Temperature range -55°C to +105°C Thermal shock MIL-STD-202, Method 107, Condition B Moisture resistance MIL-STD-202, Method 106 Corrosion MIL-STD-202, Method 101, Condition B RoHS Compliant	
Tooling	

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY RECOMMENDATION

PC3.5-3200S-53LD		DATE	2020/06/01	REV	—
A		B		C	
					
BODY		SOLDER FERRULE		CLAMP NUT	
DIAGRAM		ASSEMBLY INSTRUCTION			
		Step 1: STRIP AS SHOWN.			
		Step 2: TIN DIP SPC BRAID.			
		Step 3: SLIDE NUT " C " AND SOLDER FERRULE " B " OVER THE CABLE. Step 4: SOLDER IN " X ".			
		Step 5: CUT AWAY ANY EXCESS BRAID AND TEFLON STICKING OUT OF THE SOLDER FERRULE. Step 6: CUT CENTER CONDUCTOR TO LENGTH.			
		Step 7: SHARPEN CENTER CONDUCTOR TIP.			
		Step 8: FINALLY SCREW NUT " C " ON THE CONNECTOR BODY " A ".			
This part number complies with RoHS.					
Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				<i>Albert</i>	