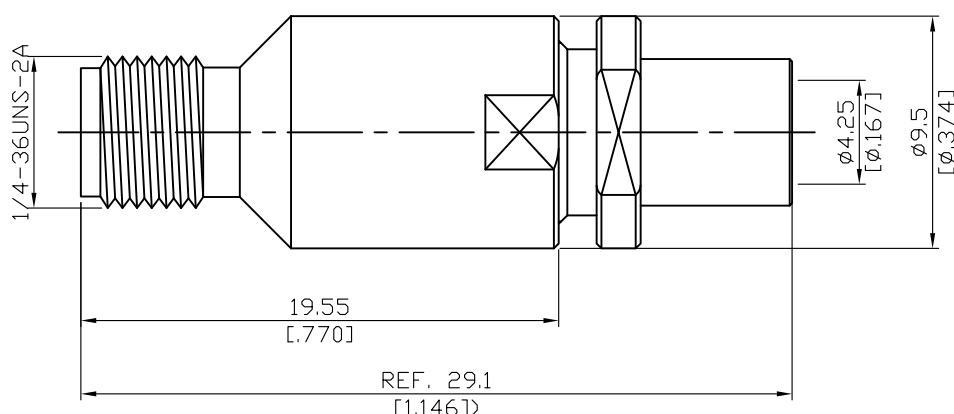


PC3.5-8200S-5003

3.5mm jack solder clamp for flexible RG402;
26.5GHz VSWR 1.2*

50Ω



Note:

1. Precision connector up to 26.5GHz
2. Solder clamp design ensures a sturdy connector/cable connection
3. Manufacturing low loss high frequency RF assemblies requires expertise.

* Using 5003

Parts	Material	Plating (Micro-inch)
Body	Stainless Steel	Passivated
Insulator	PPO	
Contact Pin	Beryllium Copper	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Solder Ferrule	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Clamp Nut	Stainless Steel	Passivated

Suitable Cables: 5003, SS402, multiflex 141, T-Flex 402, .141SRF-W-P-50-F

This part number complies with RoHS.




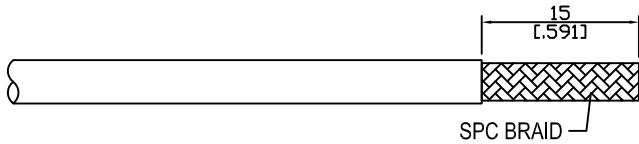

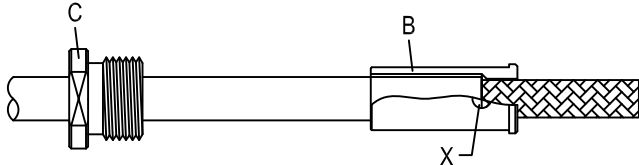
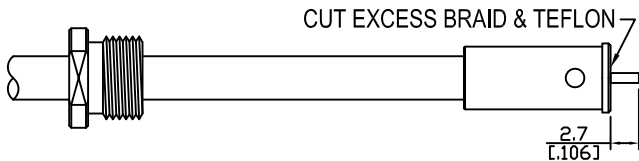
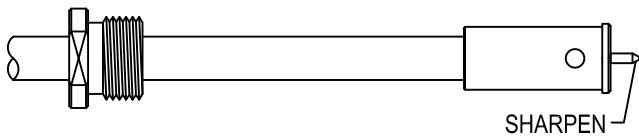
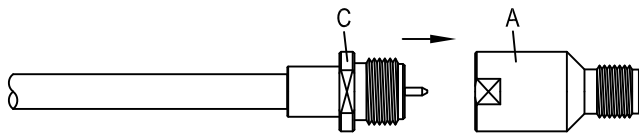
Notice: JYEBAO reserves the right to make modifications deemed appropriate.

3.5	PC3.5-8200S-5003
Interface IEC 60169-23 Mechanically compatible with 2.92 & SMA	
Electrical Data Impedance 50Ω Frequency range DC to 26.5GHz VSWR ≤ 1.2 to 26.5GHz Insertion loss $\leq 0.03 \times \sqrt{f(\text{GHz})}$ dB Insulation resistance $\geq 5000\text{M}\Omega$ Contact resistance inner conductor $\leq 3\text{m}\Omega$ Contact resistance outer conductor $\leq 2\text{m}\Omega$ Dielectric withstanding voltage (at sea level) 1000 V rms Working voltage (at sea level) 335 V rms RF leakage $\geq 100\text{dB}$ to 1GHz	
Mechanical Data Recommended coupling nut torque 7.1 to 9.7 inch lbs Coupling proof torque 15 inch lbs Coupling nut retention force ≥ 60.7 lbs Contact captivation-axial ≥ 6.1 lbs Durability (mating) ≥ 500	
Environmental Data Temperature range -55°C to +105°C Thermal shock MIL-STD-202, Method 107, Condition B Moisture resistance MIL-STD-202, Method 106 Corrosion MIL-STD-202, Method 101, Condition B RoHS Compliant	
Tooling	

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY RECOMMENDATION

PC3.5-8200S-5003		DATE	2020/05/07	REV	—
A  BODY B  SOLDER FERRULE C  CLAMP NUT					
DIAGRAM			ASSEMBLY INSTRUCTION		
			Step 1: STRIP AS SHOWN.		
			Step 2: TIN DIP SPC BRAID.		
			Step 3: SLIDE NUT " C " AND SOLDER FERRULE " B " OVER THE CABLE. Step 4: SOLDER IN " X ".		
			Step 5: CUT AWAY ANY EXCESS BRAID AND TEFLON STICKING OUT OF THE SOLDER FERRULE. Step 6: CUT CENTER CONDUCTOR TO LENGTH.		
			Step 7: SHARPEN CENTER CONDUCTOR TIP.		
			Step 8: FINALLY SCREW NUT " C " ON THE CONNECTOR BODY " A ".		
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				Albert	