


CABLE ASSEMBLY INSTRUCTION

SC8305S-0250

JYE BAO CO., LTD.

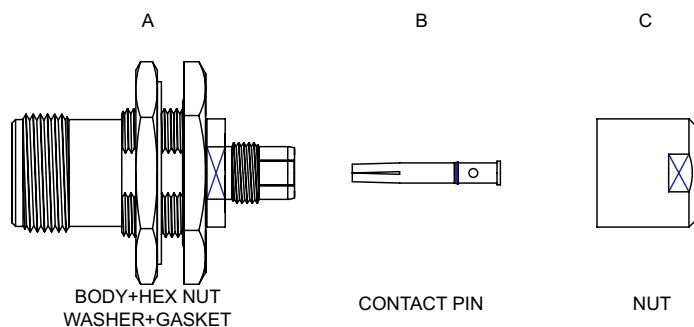


DIAGRAM


ASSEMBLY INSTRUCTION




Step 1: STRIP AS SHOWN .

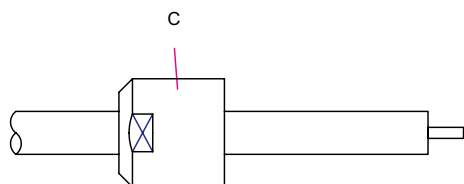

Step 2: SLIDE NUT " C " OVER CABLE

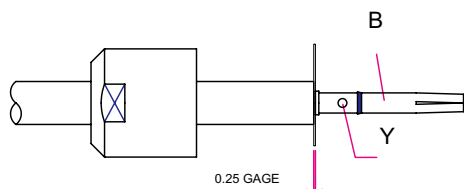

Step 3: PUT 0.25 MM GAGE IN PLACE, INSERT CABLE'S CENTER CONDUCTOR INTO CENTER PIN " B " AND SOLDER IN " Y " .

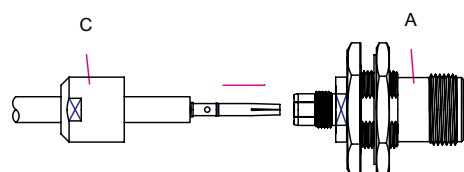

Step 4: SCREW " C " ON THE CONNECTOR BODY " A " .

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.