


## Terminal Solder Right Angle For P.C.B. Mount

## CABLE ASSEMBLY INSTRUCTION

SMA0400-9141

JYE BAO CO., LTD.

A

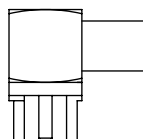

BODY

B




COVER

DIAGRAM


ASSEMBLY INSTRUCTION




Step 1: Strip AS SHOWN .

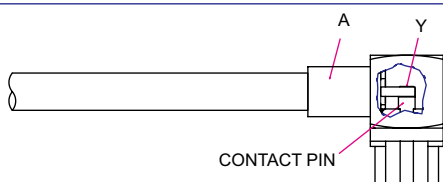

Step 2: SLIDE CENTER CONDUCTOR ON THE CONTACT PIN OF CONNECTOR " A " AND SOLDER IN " Y " .

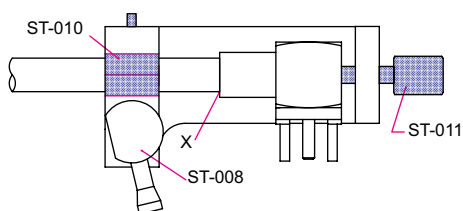

Step 3: INSERT PREPARED CABLE INTO SOLDERING FIXTURE " ST-008 ". USE INSERT TOOL " ST-010 " AND LOCATOR TOOL " ST-011 " TO FIX THE CONNECTOR. SOLDER IN " X " .

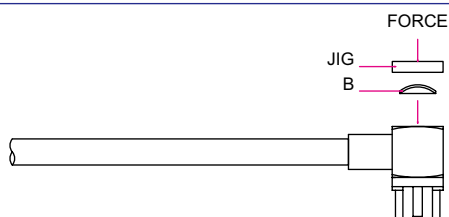

Step 4: PRESS ON THE TOP OF " B " WITH JIGS AS SHOWN ON THE DIAGRAM .

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.