

SMA3105-1.13		SMA Plug Press Fit Bulkhead For 1.13mm 6GHz VSWR 1.2	50Ω
MOUNTING HOLE			
Parts	Material	Plating (Micro-inch)	
Coupling Nut	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20	
Body	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20	
Insulator	Teflon		
Contact Pin	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20	
Barrel	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20	
Gasket	Silicone		
Retainer Ring	Beryllium Copper	Tin-Zinc-Copper-Alloy 100 Over Copper 50	
Lock Washer	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20	
Hex Nut	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20	
Suitable Cables: 1.13mm			

This part number complies with RoHS.

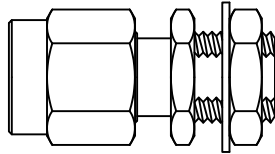


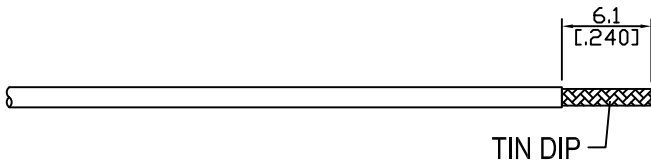
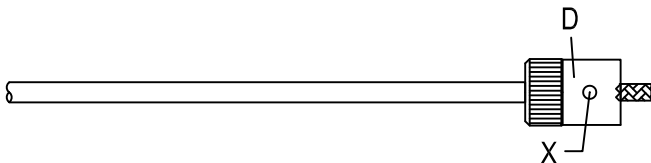
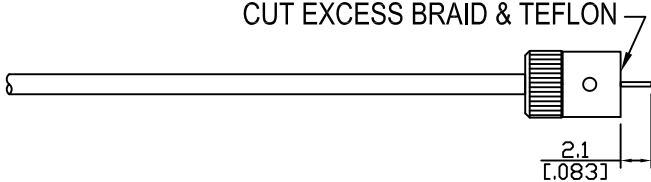
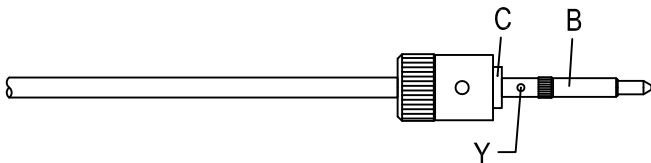
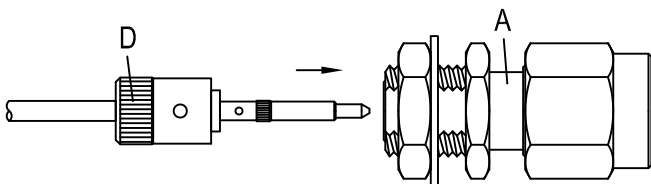
Notice: JYEBAO reserves the right to make modifications deemed appropriate.

SMA	SMA3105-1.13
Interface MIL-STD-348B Mechanically compatible with 2.92 & 3.5	
Electrical Data Impedance 50Ω Frequency range DC to 6GHz VSWR ≤ 1.2 (DC to 6GHz) Insertion loss $\leq 0.04 \times \sqrt{f(\text{GHz})}$ dB Insulation resistance $\geq 5000\text{M}\Omega$ Contact resistance inner conductor $\leq 3\text{m}\Omega$ Contact resistance outer conductor $\leq 2\text{m}\Omega$ Dielectric withstanding voltage (at sea level) 750 V rms Working voltage (at sea level) 250 V rms	
Mechanical Data Recommended coupling nut torque 4 inch lbs Coupling proof torque 5.3 inch lbs Coupling nut retention force ≥ 60.7 lbs Contact Captivation-axial ≥ 6.1 lbs Durability (mating) ≥ 100	
Environmental Data Temperature range -65°C to +165°C Thermal shock MIL-STD-202, Method 107, Condition B Moisture resistance MIL-STD-202, Method 106 Corrosion MIL-STD-202, Method 101, Condition B RoHS Compliant	
Tooling	

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY RECOMMENDATION

SMA3105-1.13		DATE	2019/01/03	REV	—
A		B	C	D	
					
BODY + WASHER + HEX NUT		CONTACT PIN	INSULATOR	FERRULE	
DIAGRAM			ASSEMBLY INSTRUCTION		
			Step 1: STRIP AS SHOWN.		
			Step 2: SLIDE SOLDER FERRULE " D " OVER THE CABLE. Step 3: SOLDER IN " X ".		
			Step 4: CUT AWAY ANY EXCESS BRAID AND TEFLON STICKING OUT OF THE SOLDER FERRULE. Step 5: STRIP AS SHOWN.		
			Step 6: SLIDE PREPARED CABLE INTO INSULATOR " C " . Step 7: PUT CONTACT PIN " B " ON CENTER CONDUCTOR AND SOLDER IN " Y ".		
			Step 8: USE PRESS MACHINE TO INSERT BARREL " D " INTO THE CONNECTOR BODY " A ".		
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				Albert	