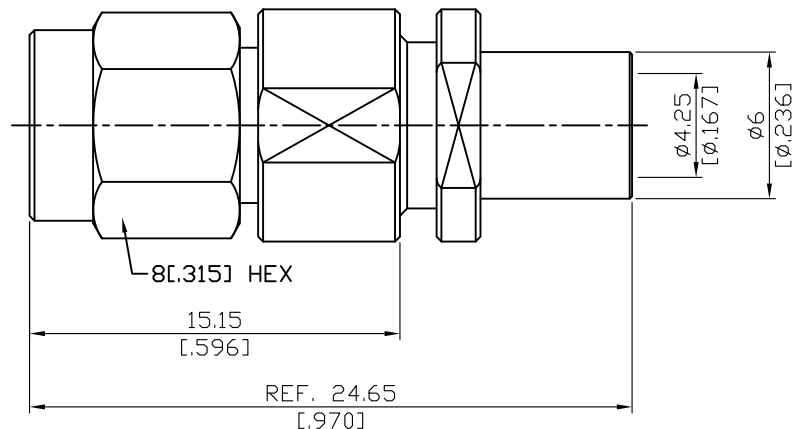


SMA32NP-S402

SMA Plug Solder Clamp For Flexible RG402; 50Ω
27GHz VSWR 1.2*



Note:

1. Precision connector up to 27GHz
 2. Solder clamp design ensures a sturdy connector/cable connection
 3. Manufacturing low loss high frequency RF assemblies requires expertise.
- *Using 5003

Parts	Material	Plating (Micro-inch)
Coupling Nut	Stainless Steel	Passivated
Body	Stainless Steel	Passivated
Insulator	Teflon	
Gasket	Silicone	
Retainer Ring	Beryllium Copper	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Pin	Beryllium Copper	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Solder Ferrule	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Clamp Nut	Stainless Steel	Passivated

Suitable Cables: 5003; SS402; T-Flex 402; Multiflex 141; .141SRF-W-P-50-F

This part number complies with RoHS.



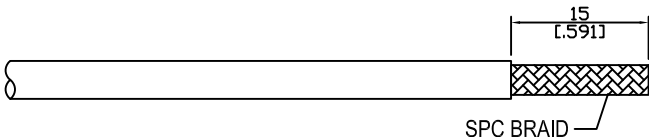

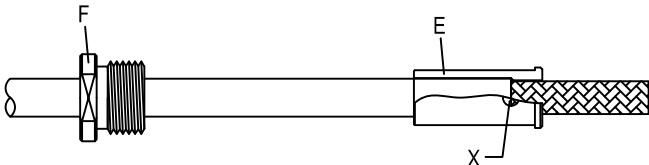
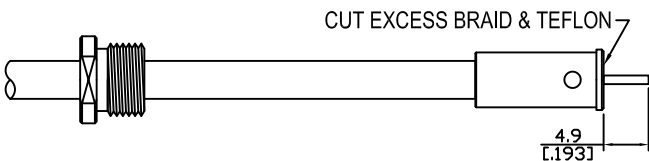
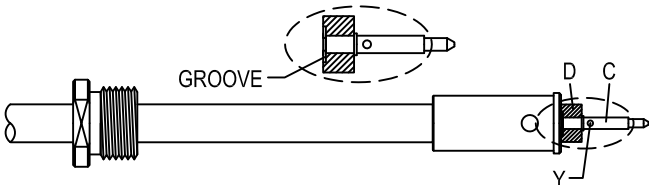
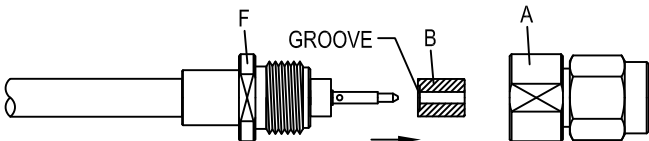
Notice: JYEBAO reserves the right to make modifications deemed appropriate.

SMA	SMA32NP-S402
Interface MIL-STD-348B Mechanically compatible with 2.92 & 3.5	
Electrical Data Impedance 50Ω Frequency range DC to 27GHz VSWR ≤ 1.2 (DC to 27GHz) Insertion loss $\leq 0.04 \times \sqrt{f(\text{GHz})}$ dB Insulation resistance $\geq 5000\text{M}\Omega$ Contact resistance inner conductor $\leq 3\text{m}\Omega$ Contact resistance outer conductor $\leq 2\text{m}\Omega$ Dielectric withstanding voltage (at sea level) 1000 V rms Working voltage (at sea level) 335 V rms	
Mechanical Data Recommended coupling nut torque 7 to 9.5 inch lbs Coupling proof torque 15 inch lbs Coupling nut retention force ≥ 60.7 lbs Contact Captivation-axial ≥ 6.1 lbs Durability (mating) ≥ 500	
Environmental Data Temperature range -65°C to +165°C Thermal shock MIL-STD-202, Method 107, Condition B Moisture resistance MIL-STD-202, Method 106 Corrosion MIL-STD-202, Method 101, Condition B RoHS Compliant	
Tooling	

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

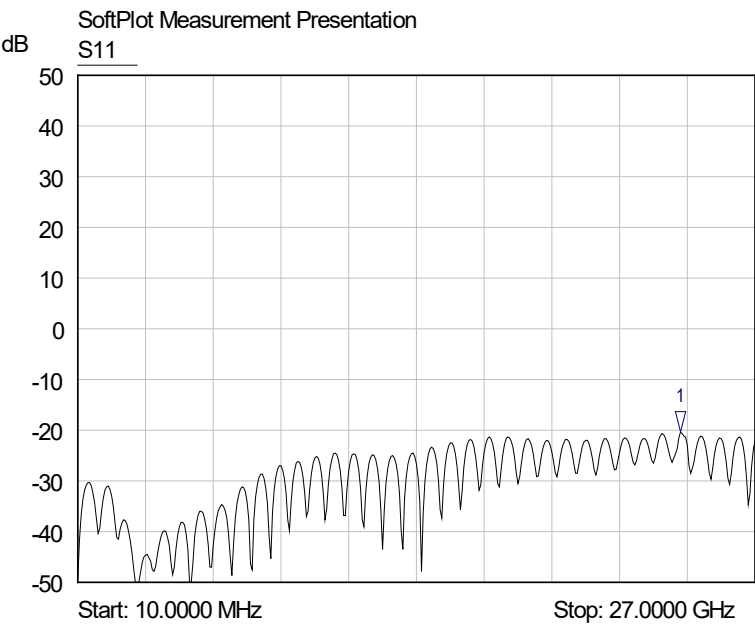
JYE BAO CO., LTD.

CABLE ASSEMBLY RECOMMENDATION

SMA32NP-S402			DATE	2020/01/21	REV	—
A	B	C	D	E	F	
						
BODY	INSULATOR	CONTACT PIN	INSULATOR	SOLDER FERRULE	CLAMP NUT	
DIAGRAM			ASSEMBLY INSTRUCTION			
			Step 1: STRIP AS SHOWN.			
			Step 2: TIN DIP SPC BRAID.			
			Step 3: SLIDE NUT " F " AND SOLDER FERRULE " E " OVER THE CABLE. Step 4: SOLDER IN " X ".			
			Step 5: CUT AWAY ANY EXCESS BRAID AND TEFLON STICKING OUT OF THE SOLDER FERRULE. Step 6: CUT CENTER CONDUCTOR TO LENGTH.			
			Step 7: PUT INSULATOR " D " AND PIN " C " ON CENTER CONDUCTOR AND SOLDER IN " Y ".			
			Step 8: SLIDE INSULATOR " B " INTO CONNECTOR BODY " A ". Step 9: FINALLY SCREW NUT " F " ON THE CONNECTOR BODY " A ".			
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.						
APPROVED		CHECKED		DRAWING		
				Albert		

SMA32NP-S402

S11



1 S11
24.0311 GHz
-20.38 dB