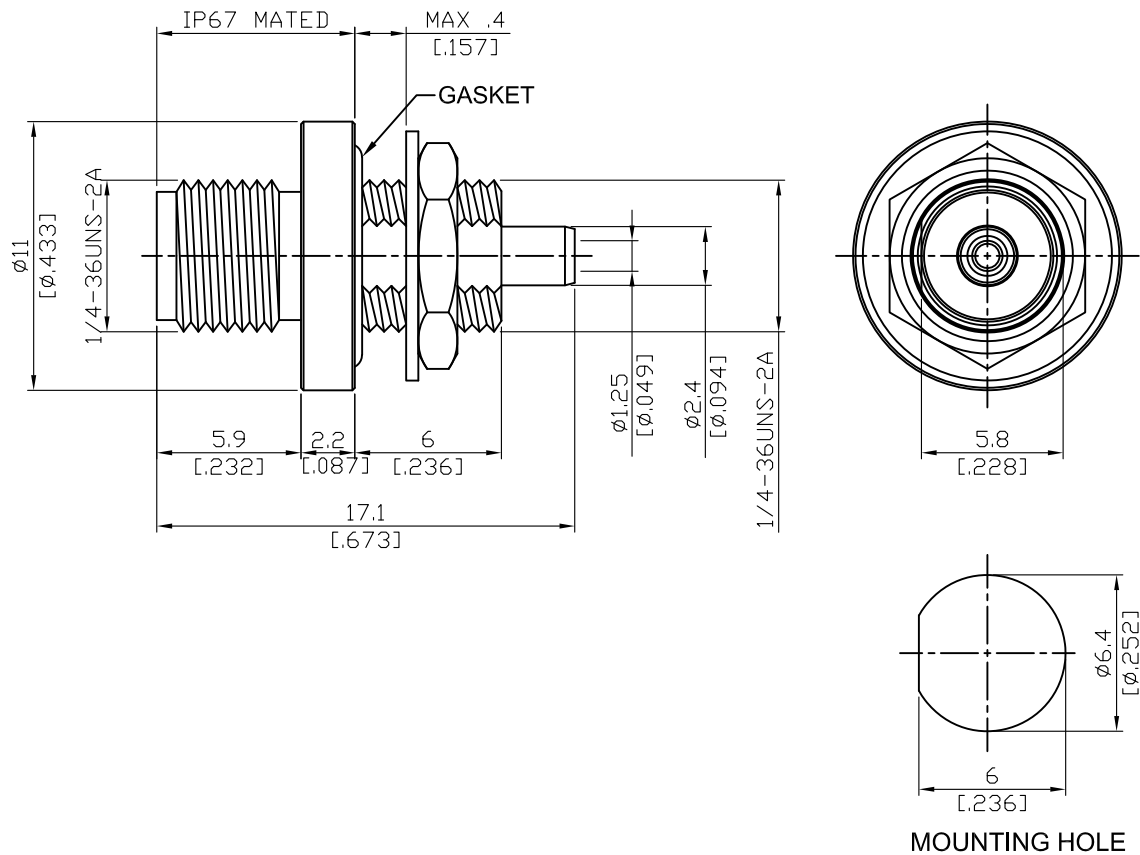


SMA8105PF-1.13

SMA Jack Press Fit Bulkhead, IP67 Mated,
For 1.13mm; 6GHz VSWR 1.2, 18GHz VSWR 1.35

50Ω



Parts	Material	Plating (Micro-inch)
Body	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Insulator	Teflon	
Contact Pin	Beryllium Copper	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Barrel	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Gasket	Silicone	
Lock Washer	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Hex Nut	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20

Suitable Cables: 1.13mm cable

This part number complies with RoHS.

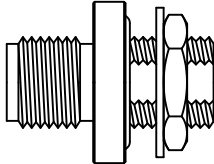
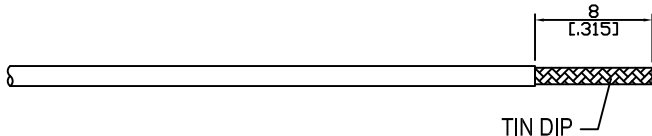
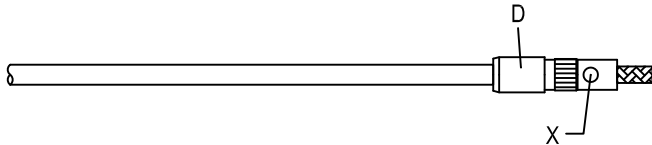
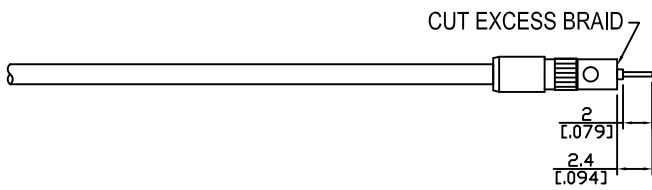
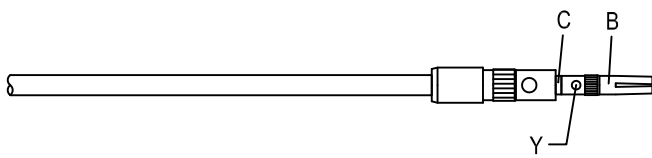
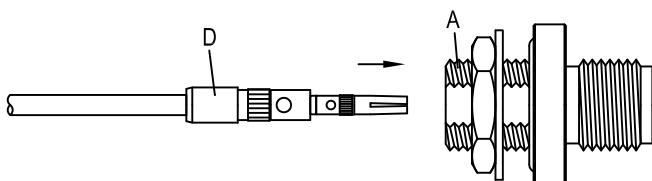
Notice: JYEBAO reserves the right to make modifications deemed appropriate.

SMA	SMA8105PF-1.13
Interface MIL-STD-348B Mechanically compatible with 2.92 & 3.5	
Electrical Data Impedance 50Ω Frequency range DC to 18GHz VSWR ≤ 1.2 (6GHz); ≤ 1.35 (18GHz) Insertion loss $\leq 0.04 \times \sqrt{f(\text{GHz})}$ dB Insulation resistance $\geq 5000\text{M}\Omega$ Contact resistance inner conductor $\leq 3\text{m}\Omega$ Contact resistance outer conductor $\leq 2\text{m}\Omega$	
Mechanical Data Recommended coupling nut torque 4 inch lbs Coupling proof torque 5.3 inch lbs Contact Captivation-axial ≥ 6.1 lbs Durability (mating) ≥ 100	
Environmental Data Temperature range -65°C to +165°C Thermal shock MIL-STD-202, Method 107, Condition B Moisture resistance MIL-STD-202, Method 106 Corrosion MIL-STD-202, Method 101, Condition B RoHS Compliant	
Tooling	

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY RECOMMENDATION

SMA8105PF-1.13		DATE	2020/07/06	REV	—
A		B	C	D	
					
BODY + GASKET + WASHER + HEX NUT		CONTACT PIN	INSULATOR	SOLDER FERRULE	
DIAGRAM			ASSEMBLY INSTRUCTION		
			Step 1: STRIP AS SHOWN. Step 2: TIN DIP BRAID.		
			Step 3: SLIDE SOLDER FERRULE " D " OVER THE CABLE AND SOLDER IN " X ".		
			Step 4: CUT AWAY ANY EXCESS BRAID STICKING OUT OF THE SOLDER FERRULE. Step 5: STRIP AS SHOWN.		
			Step 6: SLIDE PREPARED CABLE INTO INSULATOR " C ". Step 7: PUT CONTACT PIN " B " ON CENTER CONDUCTOR AND SOLDER IN " Y ".		
			Step 8: USE PRESS MACHINE TO INSERT BARREL " D " INTO THE CONNECTOR BODY " A ".		
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				Albert	

SMA8105PF-1.13

S11

