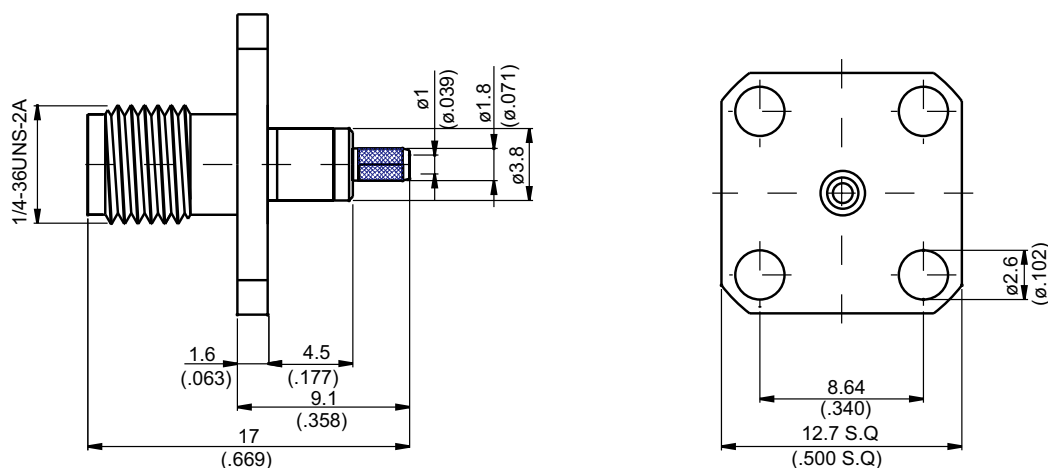
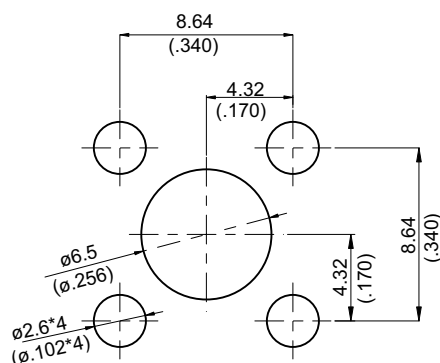


SMA8146-0178

SMA Jack Crimp SQ 12.7mm 4 Hole Flange 50Ω
For RG178, RG178-FEP; 2GHz VSWR 1.2



MOUNTING HOLE :



Parts	Material	Plating (Micro-inch)
Ferrule	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Contact Pin	Beryllium Copper	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Insulator	Teflon	
Body	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20

Weight: 3.08 g
Suitable Cables: RG178, RG178-FEP

This part number complies with RoHS.

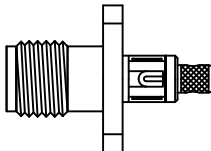

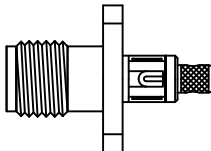

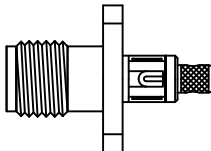

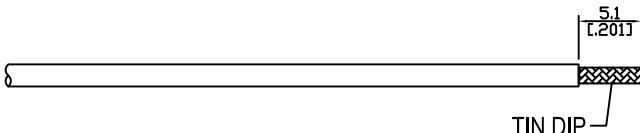
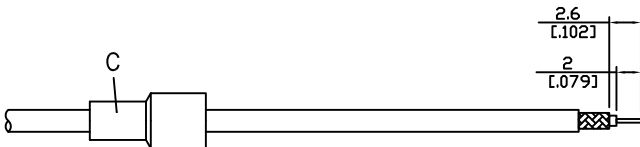
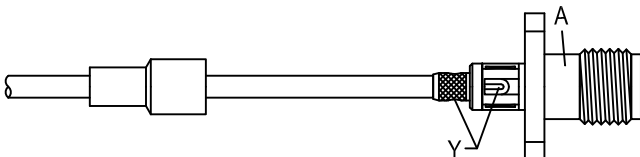
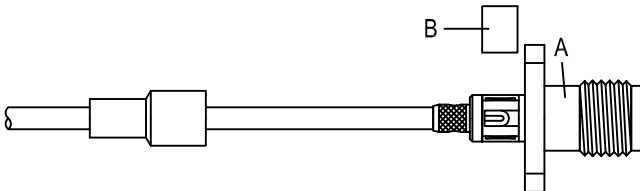
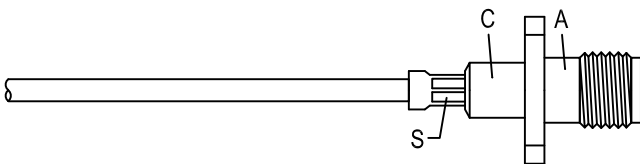
Notice: JYEBAO reserves the right to make modifications deemed appropriate.

SMA	SMA8146-0178
Interface MIL-STD-348B Mechanically compatible with 2.92 & 3.5	
Electrical Data Impedance 50Ω Frequency range DC to 2GHz VSWR ≤ 1.2 (DC to 2GHz) Insertion loss $\leq 0.04 \times \sqrt{f(\text{GHz})}$ dB Insulation resistance $\geq 5000\text{M}\Omega$ Contact resistance inner conductor $\leq 3\text{m}\Omega$ Contact resistance outer conductor $\leq 2\text{m}\Omega$ Dielectric withstanding voltage (at sea level) 750 V rms Working voltage (at sea level) 250 V rms	
Mechanical Data Recommended coupling nut torque 4 inch lbs Coupling proof torque 5.3 inch lbs Contact Captivation-axial ≥ 6.1 lbs Durability (mating) ≥ 100	
Environmental Data Temperature range -65°C to +165°C Thermal shock MIL-STD-202, Method 107, Condition B Moisture resistance MIL-STD-202, Method 106 Corrosion MIL-STD-202, Method 101, Condition B RoHS Compliant	
Tooling Crimping tool CRT-1 or CRT-2 Crimp insert INSERT-A	

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

SMA8146-0178		DATE	2015/12/15	REV	—									
<table><tr><td>A</td><td>B</td><td>C</td></tr><tr><td></td><td></td><td></td></tr><tr><td>BODY + WASHER + HEX NUT</td><td>COVER</td><td>FERRULE</td></tr></table>						A	B	C				BODY + WASHER + HEX NUT	COVER	FERRULE
A	B	C												
														
BODY + WASHER + HEX NUT	COVER	FERRULE												
DIAGRAM		ASSEMBLY INSTRUCTION												
		Step 1: STRIP AS SHOWN. Step 2: TIN DIP.												
		Step 3: SLIDE FERRULE " C " OVER CABLE. Step 4: STRIP AS SHOWN.												
		Step 5: INSERT CABLE'S CENTER CONDUCTOR INTO CONNECTOR BODY " A " AND SOLDER IN " Y ".												
		Step 6: PUT COVER " B " ON BODY " A ".												
		Step 7: SLIDE FERRULE " C " TOWARDS THE CONNECTOR " A " AND CRIMP IN " S ". (USE 2.7mm/0.106inch HEX SECTION OF INSERT-A)												
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.														
APPROVED		CHECKED		DRAWING										
				Albert										

SMA8146-0178

