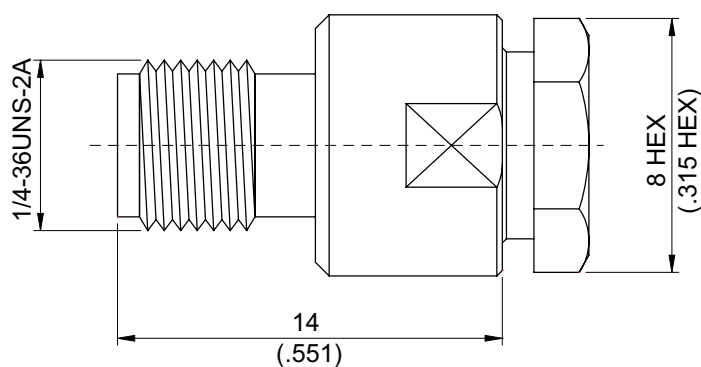


SMA8200S-141SS

SMA Jack Clamp

50Ω



Parts	Material	Plating (Micro-inch)
Ferrule	Stainless Steel	Passivated
Contact Pin	Beryllium Copper	Gold 20 Over Nickel 50 Over Copper 50
Insulator	Teflon	
Body	Stainless Steel	Passivated

Weight:

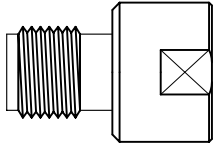

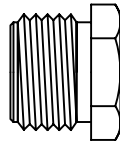
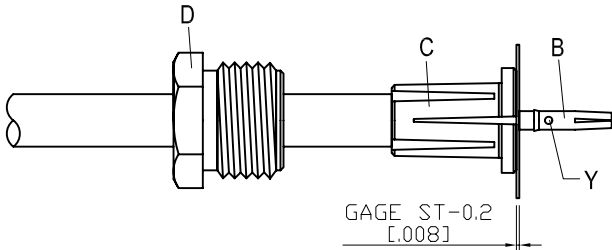
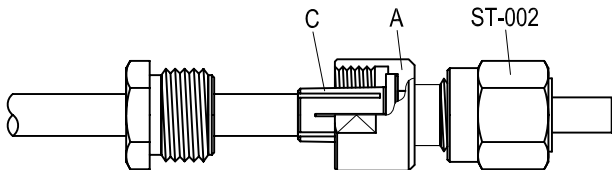
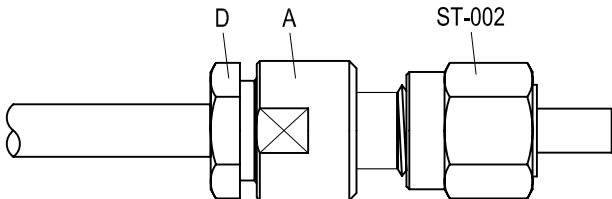
Suitable Cables: Semi-rigid.141

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

SMA8200S-141SS		DATE	2015/01/19	REV	—
A		B	C	D	
					
BODY		CONTACT PIN		COLLET	
					
				NUT	
DIAGRAM			ASSEMBLY INSTRUCTION		
			Step 1: STRIP AS SHOWN.		
			Step 2: SLIDE NUT " D " AND COLLET " C " OVER CABLE. Step 3: PUT 0.2 MM GAGE ST-0.2 IN PLACE, INSERT CABLE'S CENTER CONDUCTOR INTO CONTACT PIN " B " AND SOLDER IN " Y ".		
			Step 4: USE LOCATOR TOOL " ST-002 " TO FIX THE CONNECTOR BODY " A " AND INSERT PREPARED CABLE INTO CONNECTOR BODY " A ".		
			Step 5: FINALLY SCREW " D " ON THE CONNECTOR BODY " A ".		
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				Albert	