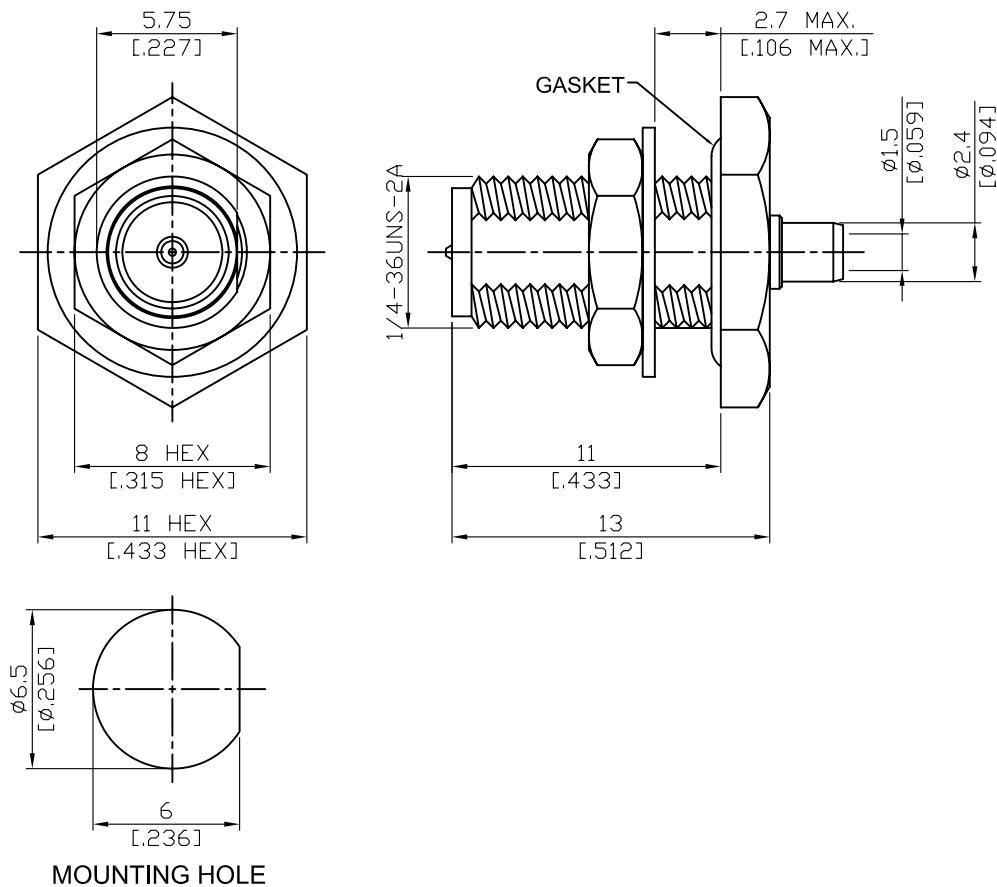


SMA9305-1.37

SMA Reverse Polarity
Jack Solder Bulkhead For 1.37mm

50Ω



Parts	Material	Plating (Micro-inch)
Barrel	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Hex Nut	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Lock Washer	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Gasket	Silicone	
Contact Pin	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Insulator	Teflon	
Body	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20

Suitable Cables: 1.37mm

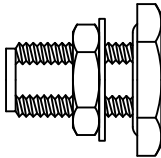
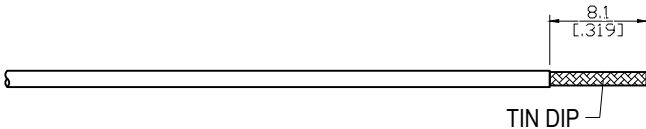
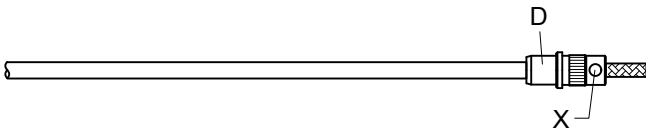
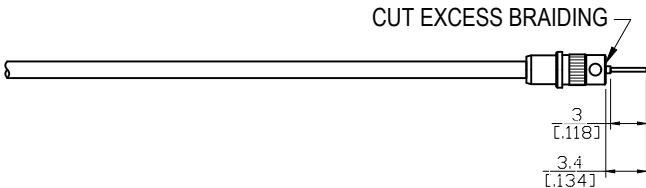
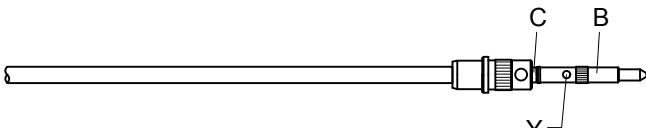
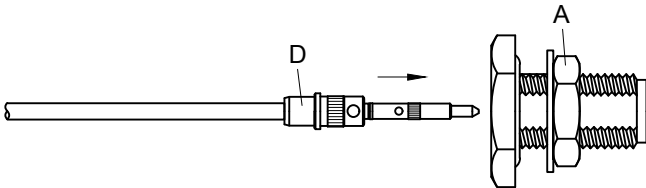
IP67 (Mated)

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications demand appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

SMA9305-1.37		DATE	2016/12/27	REV	—
A	B	C	D		
					
BODY + WASHER + HEX NUT		CONTACT PIN	INSULATOR	FERRULE	
DIAGRAM			ASSEMBLY INSTRUCTION		
			Step 1: STRIP AS SHOWN.		
			Step 2: SLIDE SOLDER FERRULE " D " OVER THE CABLE. Step 3: SOLDER IN " X ".		
			Step 4: CUT AWAY ANY EXCESS TEFLON STICKING OUT OF THE SOLDER FERRULE. Step 5: STRIP AS SHOWN.		
			Step 6: SLIDE PREPARED CABLE INTO INSULATOR " C " . Step 7: PUT CONTACT PIN " B " ON CENTER CONDUCTOR AND SOLDER IN " Y ".		
			Step 8: PRESS FIT BARREL " D " INTO THE CONNECTOR BODY " A ".		
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				Albert	