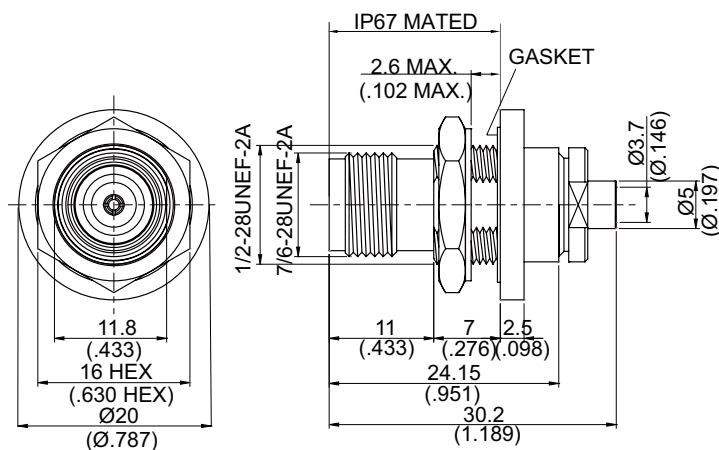


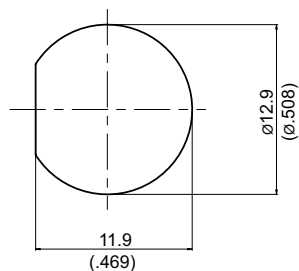
TNC8305-0141/EP

**TNC Jack Solder Bulkhead
IP67 Mated; For RG402**

50Ω



MOUNTING HOLE



Parts	Material	Plating (Micro-inch)
Solder Nut	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Hex Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Gasket	Silicon	
Insulator	Teflon	
Contact Pin	Phosphor Bronze	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

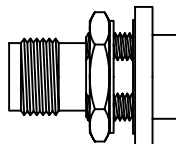



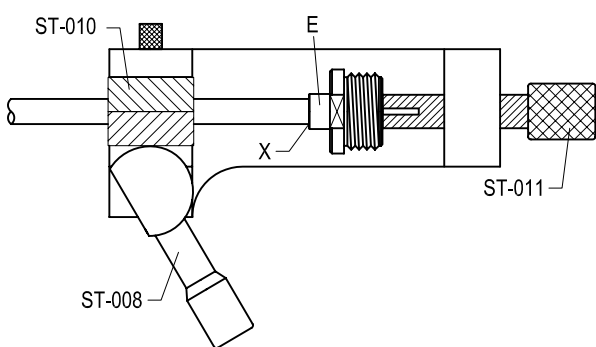
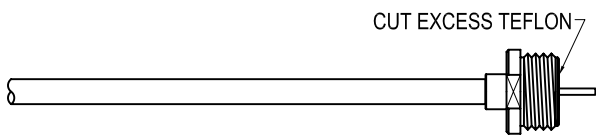
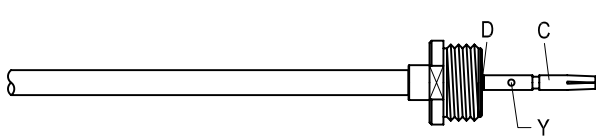
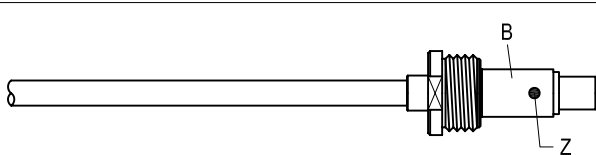
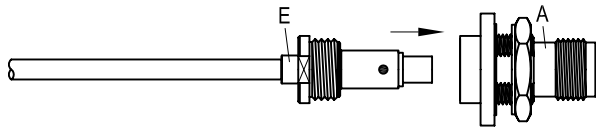
Suitable Cables: Semi-rigid.141

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

TNC8305-0141/EP		DATE	2017/07/06	REV	—
A	B	C	D	E	
					
BODY + GASKET + WASHER + HEX NUT	INSULATOR	CONTACT PIN	INSULATOR	SOLDER NUT	
DIAGRAM		ASSEMBLY INSTRUCTION			
		Step 1: STRIP AS SHOWN.			
		Step 2: USE SOLDERING FIXTURE " ST-008 ", INSERT TOOL " ST-010 " AND LOCATOR TOOL " ST-011 " TO FIX THE SOLDER NUT " E ". SOLDER IN " X ".			
		Step 3: CUT AWAY ANY EXCESS TEFLON STICKING OUT OF THE SOLDER NUT.			
		Step 4: PUT INSULATOR " D " AND CONTACT PIN " C " ON CENTER CONDUCTOR AND SOLDER IN " Y ".			
		Step 5: PUT INSULATOR " B " ON CONTACT PIN AND ADD EPOXY IN " Z ".			
		Step 6: SCREW SOLDER NUT " E " ON THE CONNECTOR BODY " A ".			
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				Albert	