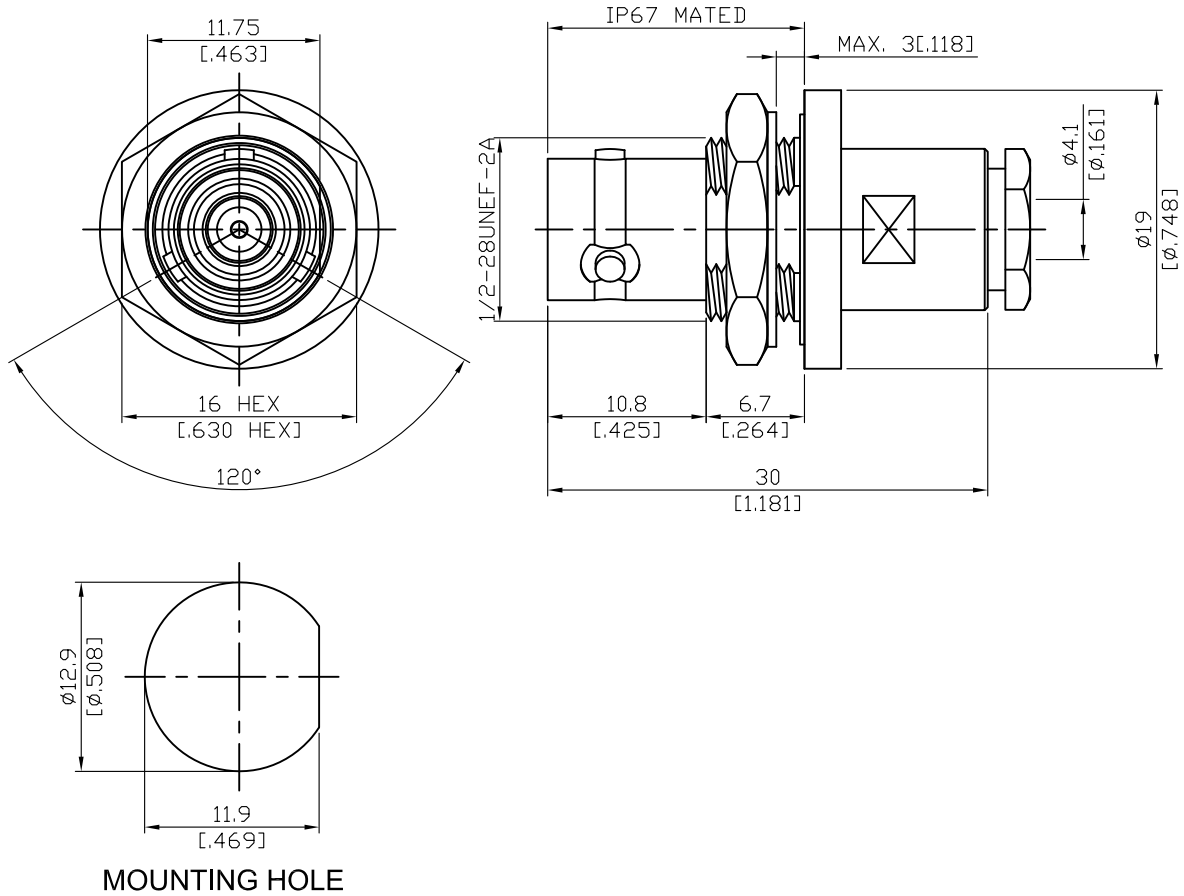


TRB8205-TR50

TRB/BNC Jack Clamp Bulkhead,
IP67 Mated, For TRIAX-5001,TRC-50-1














Parts	Material	Plating (Micro-inch)
Braid Clamp	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Hex Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Pin	Beryllium Copper	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Insulator	Teflon	
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Body	Brass	Gold 4 Over Nickel-Phosphorus Alloy 80 Over Copper 20
Gasket	Silicone	
Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

TRB8205-TR50				DATE	2019/10/15	REV	—		
A	B	C	D	E	F	G	H	I	
									
BODY + GASKET + WASHER + HEX NUT		CONTACT PIN	INSULATOR	BRAID CLAMP	INSULATOR	BRAID CLAMP	GASKET	WASHER	NUT
DIAGRAM				ASSEMBLY INSTRUCTION					
				Step 1: STRIP AS SHOWN.					
				Step 2: SLIDE NUT " I " 、 WASHER " H " 、 GASKET " G " AND OVER CABLE.					
				Step 3: WRAP THE BRAIDING BACKWARD OVER GASKET " G " .					
				Step 4: SLIDE BRAID CLAMP " F " BETWEEN BRAIDING AND DIELECTRIC.					
				Step 5: STRIP AS SHOWN.					
				Step 6: SLIDE INSULATOR " E " AND BRAID CLAMP " D " OVER CABLE.					
				Step 7: WRAP THE BRAIDING OVER " D " .					
				Step 8: STRIP AS SHOWN.					
				Step 9: PUT INSULATOR " C " AND CONTACT PIN " B " ON CENTER CONDUCTOR AND SOLDER IN " Y " .					
				Step 11: FINALLY SCREW NUT " I " ON THE CONNECTOR BODY " A " .					
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.									
APPROVED			CHECKED			DRAWING			
						Albert			