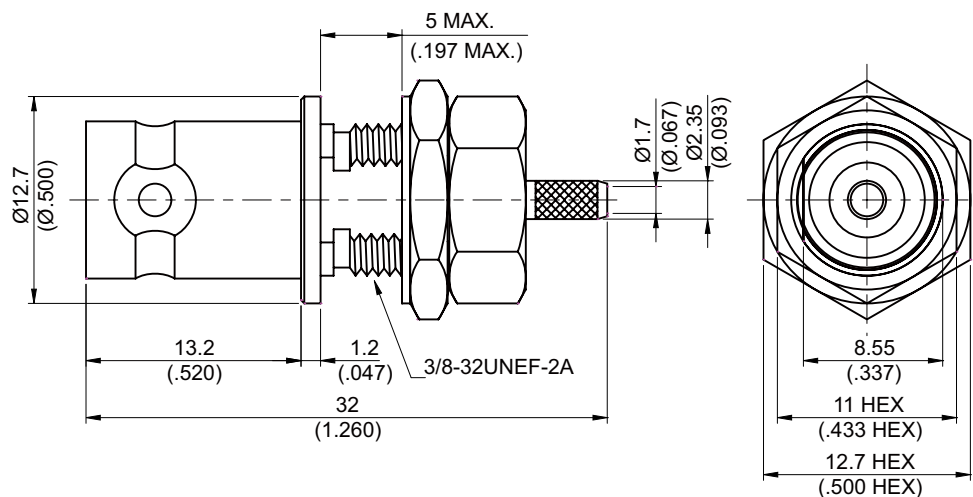


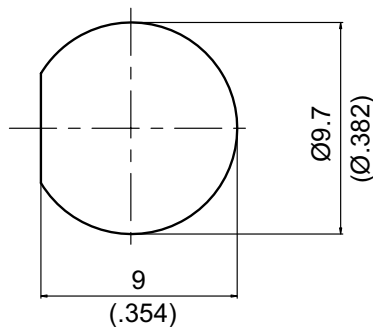
BNC8505-L100

BNC jack crimp bulkhead
For JBY100,LMR100; 2.5GHz VSWR 1.2

50Ω



MOUNTING HOLE



Parts	Material	Plating (Micro-inch)
Ferrule	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Lock Washer	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Hex Nut	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Barrel	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50
Contact Pin	Phosphor Bronze	Gold 4 Over Nickel Phosphorous Alloy 80 Over Copper 20
Insulator	Teflon	
Body	Brass	Tin-Zinc-Copper-Alloy 100 Over Copper 50

Weight: 11.74 g

Suitable Cables:JBY100,LMR100

This part number complies with RoHS.

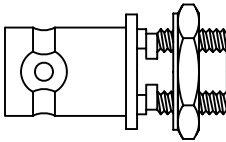



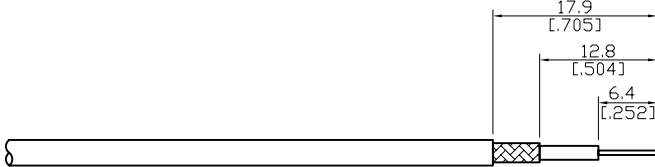
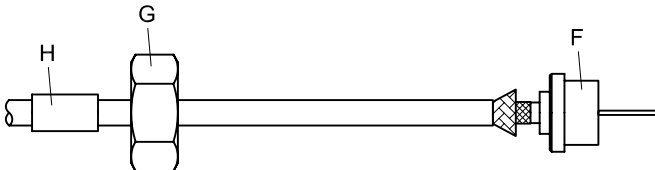
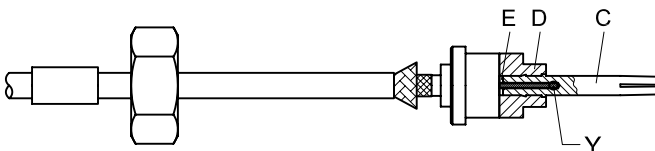
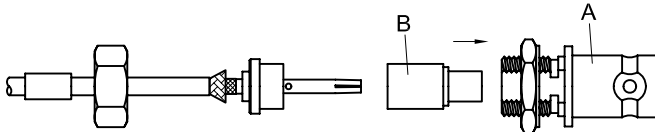
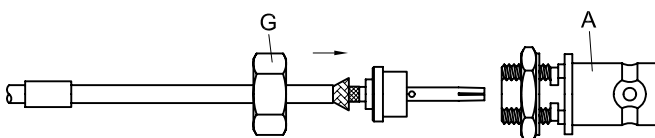
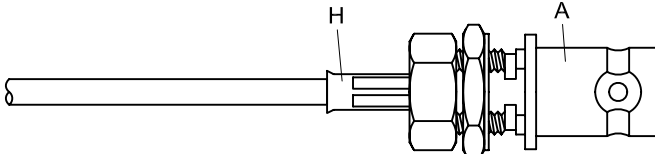
Notice: JYEBAO reserves the right to make modifications deemed appropriate.

BNC	BNC8505-L100																		
Interface MIL-STD-348B																			
Electrical Data <table> <tr> <td>Impedance</td><td>50Ω</td></tr> <tr> <td>Frequency range</td><td>DC to 2.5GHz</td></tr> <tr> <td>VSWR</td><td>≤ 1.2 (DC to 2.5GHz)</td></tr> <tr> <td>Insertion loss</td><td>≤ 0.1 x √f(GHz)dB</td></tr> <tr> <td>Insulation resistance</td><td>≥ 5000MΩ</td></tr> <tr> <td>Contact resistance inner conductor</td><td>≤ 1.5mΩ</td></tr> <tr> <td>Contact resistance outer conductor</td><td>≤ 1mΩ</td></tr> <tr> <td>Dielectric withstanding voltage (at sea level)</td><td>1500 V rms</td></tr> <tr> <td>Working voltage (at sea level)</td><td>500 V rms</td></tr> </table>		Impedance	50Ω	Frequency range	DC to 2.5GHz	VSWR	≤ 1.2 (DC to 2.5GHz)	Insertion loss	≤ 0.1 x √f(GHz)dB	Insulation resistance	≥ 5000MΩ	Contact resistance inner conductor	≤ 1.5mΩ	Contact resistance outer conductor	≤ 1mΩ	Dielectric withstanding voltage (at sea level)	1500 V rms	Working voltage (at sea level)	500 V rms
Impedance	50Ω																		
Frequency range	DC to 2.5GHz																		
VSWR	≤ 1.2 (DC to 2.5GHz)																		
Insertion loss	≤ 0.1 x √f(GHz)dB																		
Insulation resistance	≥ 5000MΩ																		
Contact resistance inner conductor	≤ 1.5mΩ																		
Contact resistance outer conductor	≤ 1mΩ																		
Dielectric withstanding voltage (at sea level)	1500 V rms																		
Working voltage (at sea level)	500 V rms																		
Mechanical Data <table> <tr> <td>Recommended coupling nut torque</td><td>0.6 to 2.5 inch lbs</td></tr> <tr> <td>Contact captivation-axial Durability</td><td>≥ 6.1 lbs</td></tr> <tr> <td>(mating)</td><td>≥ 500</td></tr> </table>		Recommended coupling nut torque	0.6 to 2.5 inch lbs	Contact captivation-axial Durability	≥ 6.1 lbs	(mating)	≥ 500												
Recommended coupling nut torque	0.6 to 2.5 inch lbs																		
Contact captivation-axial Durability	≥ 6.1 lbs																		
(mating)	≥ 500																		
Environmental Data <table> <tr> <td>Temperature range</td><td>-65°C to +165°C</td></tr> <tr> <td>Thermal shock</td><td>MIL-STD-202, Method 107, Condition B</td></tr> <tr> <td>Moisture resistance</td><td>MIL-STD-202, Method 106</td></tr> <tr> <td>Corrosion</td><td>MIL-STD-202, Method 101, Condition B</td></tr> <tr> <td>RoHS</td><td>Compliant</td></tr> </table>		Temperature range	-65°C to +165°C	Thermal shock	MIL-STD-202, Method 107, Condition B	Moisture resistance	MIL-STD-202, Method 106	Corrosion	MIL-STD-202, Method 101, Condition B	RoHS	Compliant								
Temperature range	-65°C to +165°C																		
Thermal shock	MIL-STD-202, Method 107, Condition B																		
Moisture resistance	MIL-STD-202, Method 106																		
Corrosion	MIL-STD-202, Method 101, Condition B																		
RoHS	Compliant																		
Tooling <table> <tr> <td>Crimping tool</td><td>CRT-1 or CRT-2</td></tr> <tr> <td>Crimp insert</td><td>INSERT-A</td></tr> </table>		Crimping tool	CRT-1 or CRT-2	Crimp insert	INSERT-A														
Crimping tool	CRT-1 or CRT-2																		
Crimp insert	INSERT-A																		

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

BNC8505-L100				DATE	2016/04/18	REV	—	
A	B	C	D	E	F	G	H	
								
BODY + WASHER + HEX NUT		INSULATOR	CONTACT PIN	INSULATOR	INSULATOR	BARREL	HEX NUT	FERRULE
DIAGRAM				ASSEMBLY INSTRUCTION				
				Step 1: STRIP AS SHOWN.				
				Step 2: SLIDE FERRULE "H" AND HEX NUT "G" OVER CABLE. Step 3: LOOSEN BRAIDING AND SLIDE CONNECTOR "F" IN PLACE.				
				Step 4: SLIDE PREPARED CABLE INTO INSULATOR "D" AND "E". Step 5: PUT PIN "C" ON CENTER CONDUCTOR AND SOLDER IN "Y".				
				Step 6: SLIDE INSULATOR "B" INTO CONNECTOR BODY "A".				
				Step 7: SCREW HEX NUT "G" ON THE CONNECTOR BODY "A".				
				Step 8: SLIDE FERRULE "H" TOWARDS THE BARREL "F" AND CRIMP. (USE 3.3mm/0.130inch HEX SECTION OF INSERT-A)				
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.								
APPROVED			CHECKED			DRAWING		
						<i>Albert</i>		

BNC8505-L100

S11

